

NEW OPTICS STYLES
RAY-BAN META (GEN 2)
DESIGNED FOR PRESCRIPTION WEARERS
BROCHURE | 2026


CONTENTS

01	AI GLASSES MADE FOR PRESCRIPTIONS	07	PRESCRIPTION OFFER
02	PRODUCT FEATURES FOR IMPROVED COMFORT	08	LENS MOUNTING & DISPENSING TIPS
03	FUNCTIONALITIES	09	PACKAGING & CHARGING CASE
04	META AI EXPERIENCE	10	META AI APP
05	NEW STYLES	11	FREQUENTLY ASKED QUESTIONS (FAQ)
06	LENS SOLUTIONS		

THE #1 SELLING AI GLASSES, MADE FOR PRESCRIPTIONS

Ray-Ban

GIVE PEOPLE THE CONFIDENCE TO LIVE
IN THE MOMENT AS THEIR TRUEST SELVES.



∞ Meta

GIVE PEOPLE THE POWER TO BUILD COMMUNITY
AND BRING THE WORLD CLOSER TOGETHER.

AI GLASSES
MADE FOR PRESCRIPTIONS

ENHANCE EVERY MOMENT

AI GLASSES MADE FOR PRESCRIPTIONS.

Ray-Ban Meta Blayzer Optics (Gen 2) and Ray-Ban Meta Scriber Optics (Gen 2) are for those who wear prescription glasses. With over 8 hours of battery life and all-day comfort, you can enhance every part of your day. With sleeker, more lightweight frames, interchangeable nose pads, and adjustable temple tips, you can find the perfect fit. Best paired with Transitions® lenses to give you the freedom to make the most out of every moment whether you're inside or outside. From capturing your world hands-free to enhancing your life with Meta AI, you'll never miss a beat with Ray-Ban Meta (Gen 2).



LIVE FORWARD

LIFE IS MORE INTERESTING
WHEN YOU LEAD THE WAY.

The Ray-Ban Meta audience is a combination of:

STYLE FORWARD













Those who are fashion-forward and only wear what suits their personal style. They want to feel confident in what they wear and how they show up in the world. They strive to get more out of life and seek new experiences. Always on the go and open to change, they often try new hobbies and learn new skills, such as travel, gourmet food, and music.

TECH ENTHUSIAST

Those who pride themselves on being tech-engaged and innovative, among the first to the latest evolutions of technology and culture, especially AI glasses. They're on the forefront of what's new and unique.



NEW RAY-BAN META STYLES FOR PRESCRIPTION GLASSES

	 STYLES	 FRAME FIT	 BATTERY	 CAMERA	 AUDIO	 CONTROLS	32 GB MEMORY	 CONNECTIVITY	 HARDWARE	 PRESCRIPTION
 <p>GEN 2 <small>NEW</small> OPTICS STYLES</p>	Blazer Optics Scriber Optics	Extra Comfort Adjustable temple tips <ul style="list-style-type: none"> • Interchangeable nose pads (3 sets) • Adjustable temple tips • Over extension hinges • Slimmer temple tips 	Over 8 hours of use on a single charge + 48 hours with charging case 50% charge in 20 minutes	30% smaller camera and LED Up to 3K video resolution at 30 FPS Ultra wide 12 MP camera Adjustable stabilization for 1080p+ 30fps videos Up to 60fps at 1080p 10% faster transfer time from glasses to phone	6-mic system with immersive audio recording and reduced background noise 5 hours continuous audio 5.5 hours continuous phone calls	Action Button Power Slider Cap-Touch Capture Button	32GB 1000+ photos (3 frame burst) 100+ videos (30s)	Bluetooth 5.3 WiFi 6	Water resistance IPX4	Optimized for prescription (Lens BASE 4 for extended Rx range)
 <p>GEN 2</p>	Wayfarer Headliner Skyler	Iconic Style <ul style="list-style-type: none"> • Wayfarer available in 2 sizes (50 & 53) • Headliner Standard and Low bridge Fit • Skyler Standard Fit 	Up to 8 hours of use on a single charge + 48 hours with charging case 50% charge in 20 minutes	Up to 3K video resolution at 30 FPS Ultra wide 12 MP camera Adjustable stabilization for 1080p+ 30fps videos Up to 60fps at 1080p 10% faster transfer time from glasses to phone	5 mic system with immersive audio recording Up to 5 hours continuous audio 5.5 hours continuous phone calls	Power Slider Cap-Touch Capture Button	32GB 1000+ photos (3 frame burst) 100+ videos (30s)	Bluetooth 5.3 WiFi 6	Water resistance IPX4	Prescription available
 <p>GEN 1</p>	Wayfarer Headliner Skyler	Iconic Style <ul style="list-style-type: none"> • Wayfarer available in 2 sizes (50 & 53) 	Up to 4 hours of use on a single charge +32 hours with charging case	1080p+ video resolution at 30 FPS Ultra wide 12 MP camera Adjustable stabilization for 1080p+ 30fps videos Up to 60fps at 1080p	5 mic system with immersive audio recording 3.5 hours continuous audio 4 hours continuous phone calls	Power Slider Cap-Touch Capture Button	32GB 500+ photos (3 frame burst) 100+ videos (30s)	Bluetooth 5.3 WiFi 6	Water resistance IPX4	Prescription available

**PRODUCT FEATURES
FOR IMPROVED COMFORT**

TWO NEW OPTICAL STYLES

2 styles // 12 SKUs available //
3 Spring Summer 2026 color capsules SKUs

Introducing two new styles, Scriber Optics and Blayzer Optics – designed to be slimmer, more comfortable, and customizable to your perfect fit. All while keeping you connected with Meta AI.

BLAYZER OPTICS

RECTANGLE
REGULAR | LARGE




SCRIBER OPTICS

PANTHOS



NEW PRODUCT FEATURES

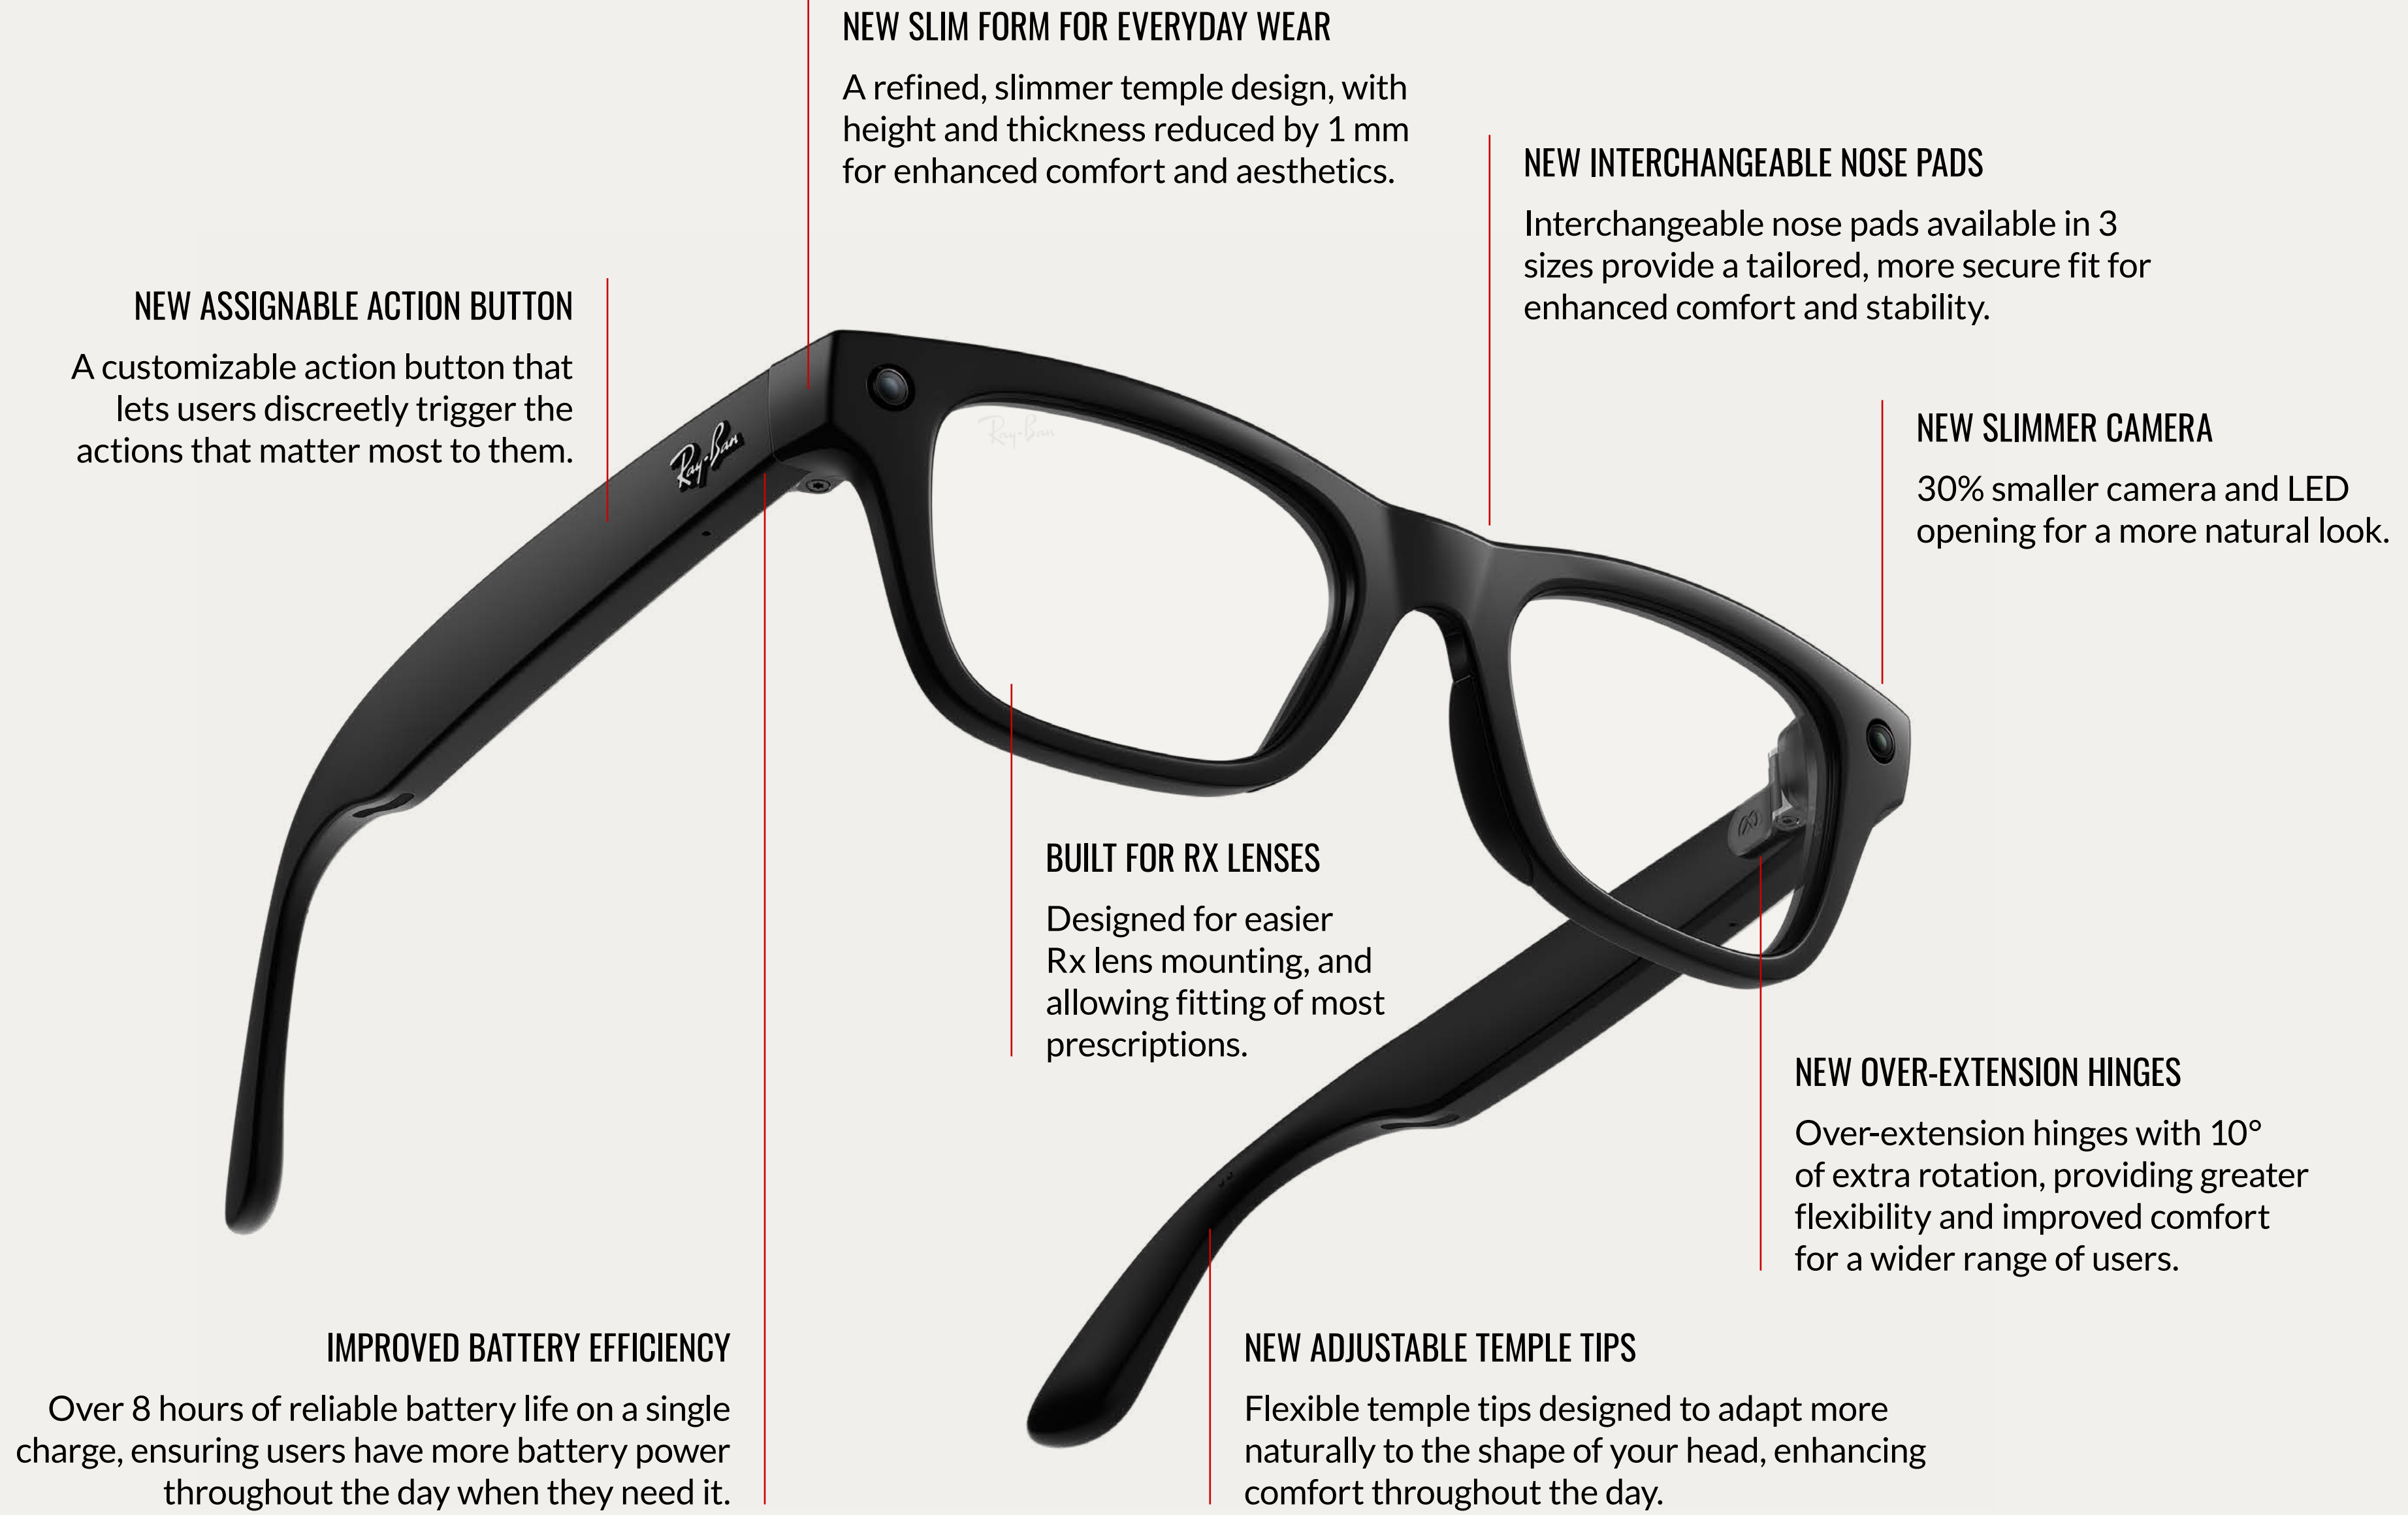

NEW ASSIGNABLE ACTION BUTTON
A customizable action button that lets users discreetly trigger the actions that matter most to them.

NEW SLIM FORM FOR EVERYDAY WEAR
A refined, slimmer temple design, with height and thickness reduced by 1 mm for enhanced comfort and aesthetics.

NEW INTERCHANGEABLE NOSE PADS
Interchangeable nose pads available in 3 sizes provide a tailored, more secure fit for enhanced comfort and stability.

NEW SLIMMER CAMERA
30% smaller camera and LED opening for a more natural look.


BUILT FOR RX LENSES
Designed for easier Rx lens mounting, and allowing fitting of most prescriptions.

NEW OVER-EXTENSION HINGES
Over-extension hinges with 10° of extra rotation, providing greater flexibility and improved comfort for a wider range of users.

NEW ADJUSTABLE TEMPLE TIPS
Flexible temple tips designed to adapt more naturally to the shape of your head, enhancing comfort throughout the day.

IMPROVED BATTERY EFFICIENCY
Over 8 hours of reliable battery life on a single charge, ensuring users have more battery power throughout the day when they need it.

NEW COMFORT FEATURES

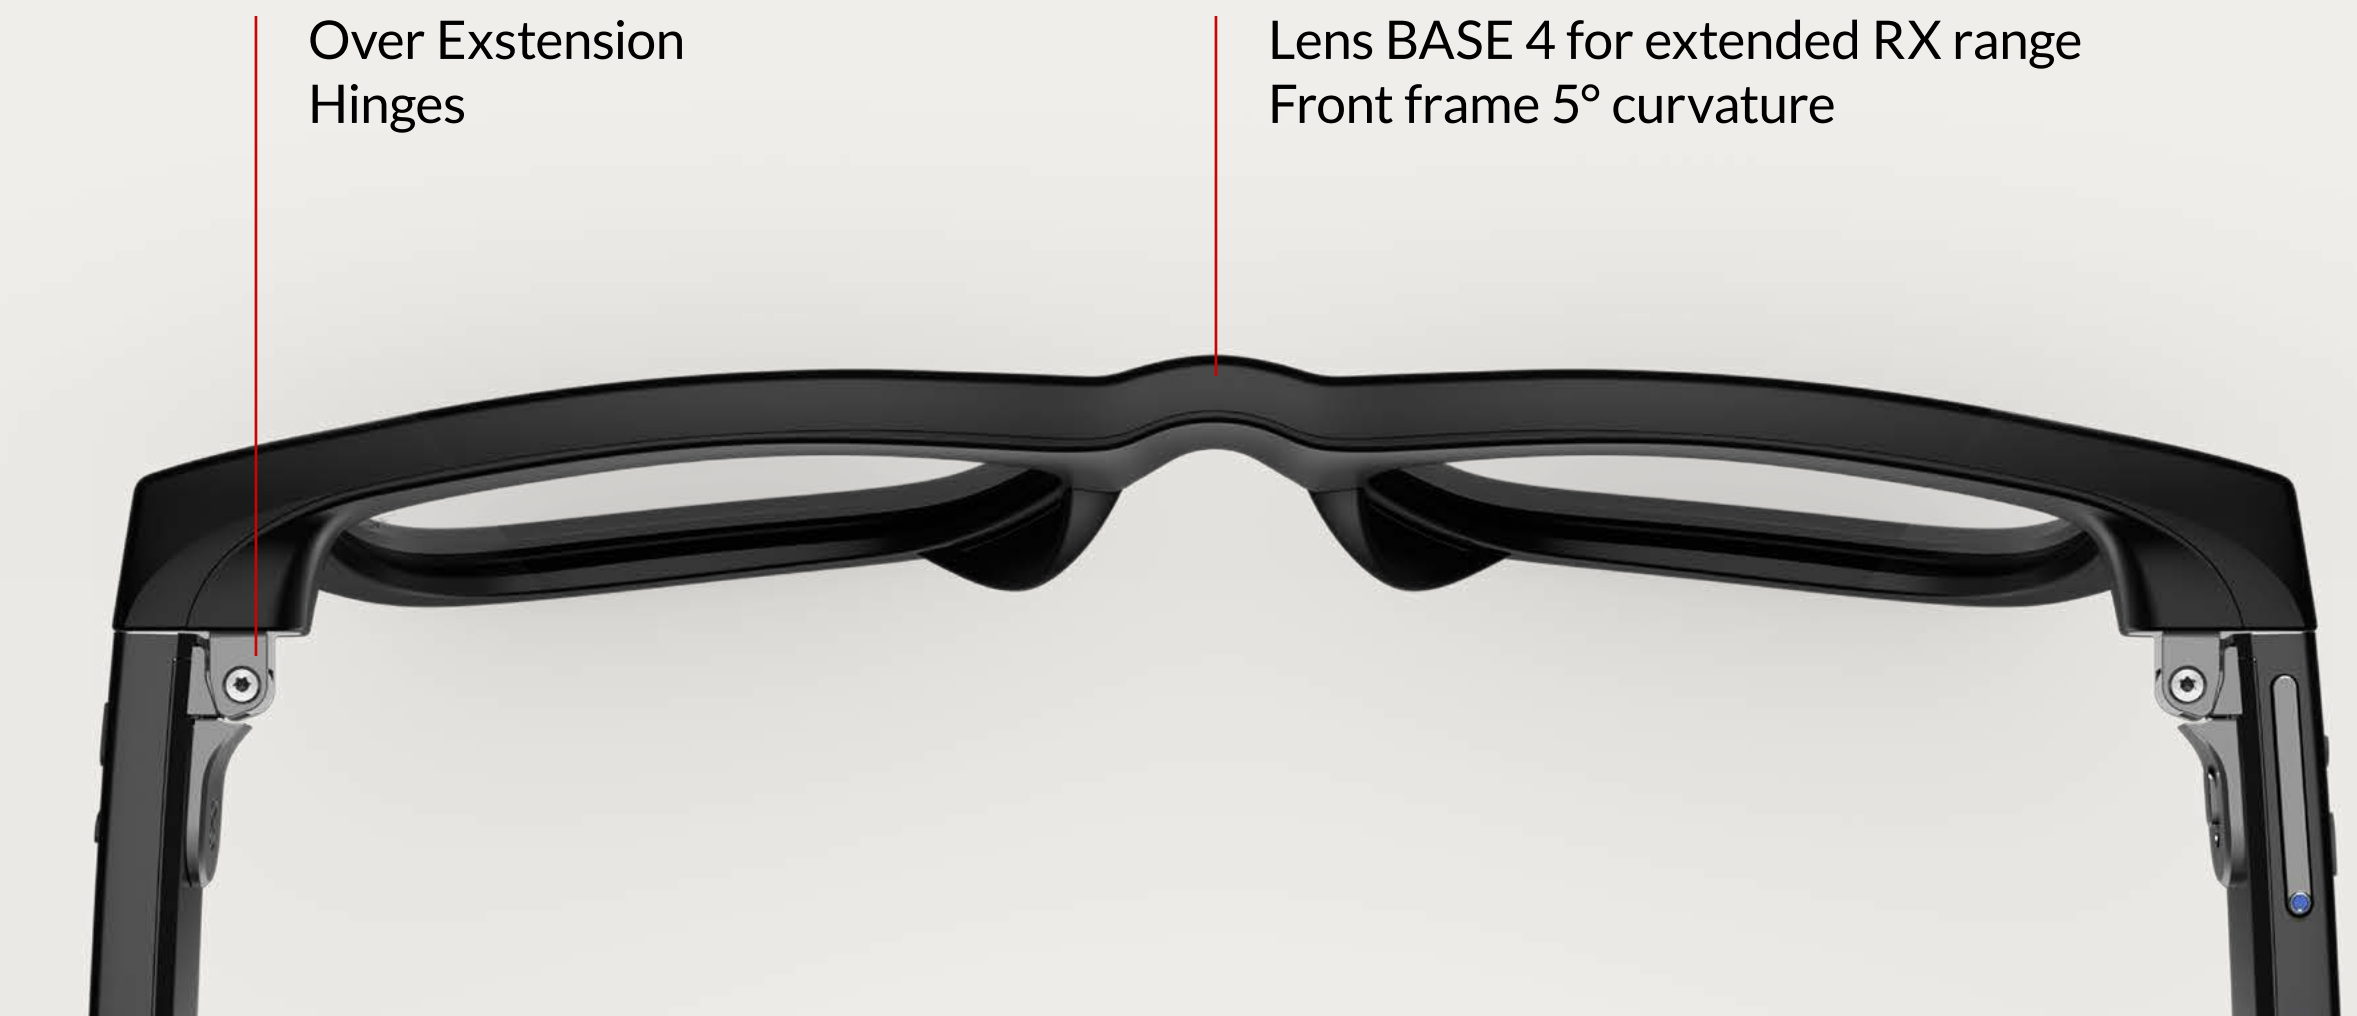

*Not suitable for heat adjustment. Only manual fitting.

**Available in three sizes for optimal fit.

INTERCHANGEABLE NOSE PADS

Nose pads are available in three interchangeable sizes to ensure an optimal, personalized fit.

- High Bridge Fit
- Universal Fit (on the glasses)
- Low Bridge Fit


Each nose pad is clearly marked with L (left) or R (right), along with a dot system that indicates the fit size, making it easy to identify and swap.



High Bridge Fit and Low Bridge Fit are included in the packaging. Universal Fit is mounted by default on the frame.

NOSE PADS SET UP FOR OPTIMAL FIT


1. Hold the glasses and insert the triangular tool near the mic hole to pry off.*

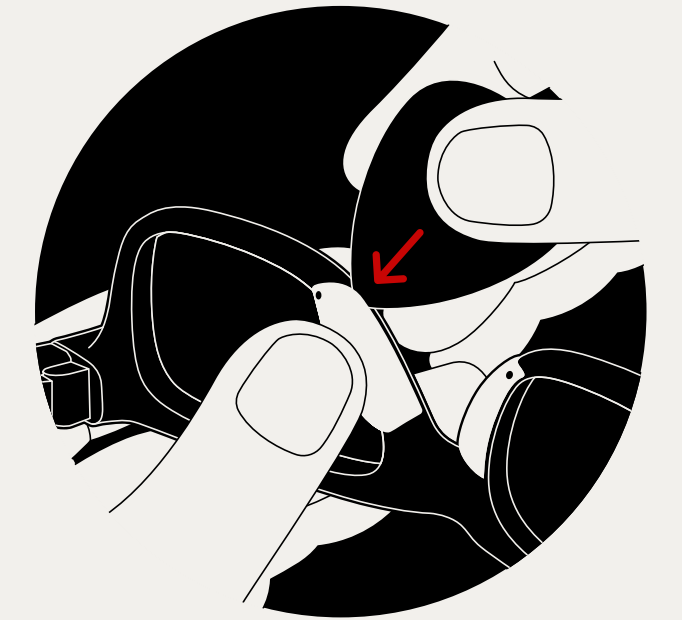

2. To replace, match L/R nose pads and align mic holes.



3. Press until you hear a click. Check fit.

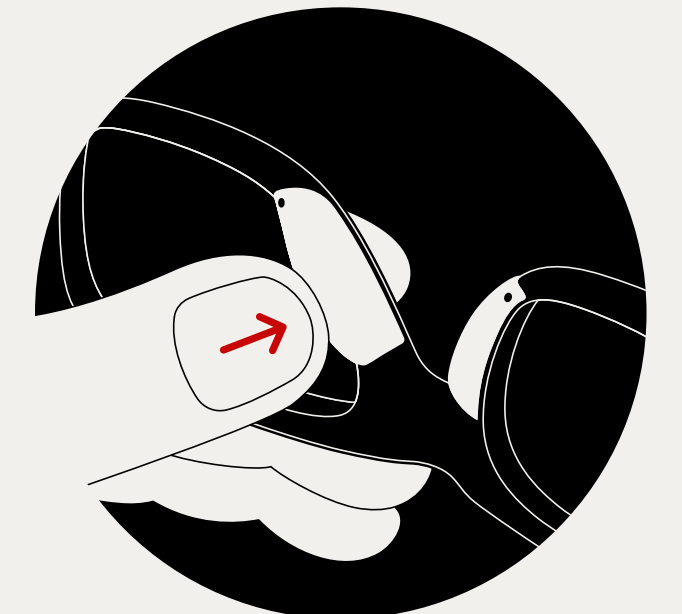


*To remove the nose pad more easily, gently press it with your thumb toward the frame while holding the frame steady; this will allow for smooth insertion of the tool.

ADJUSTABLE TEMPLE TIPS

Designed for manual adjustment only, the flexible temple tips adapt to the wearer's head shape for a more personalized and comfortable fit*.

HOW TO ADJUST THE TEMPLE TIPS FOR OPTIMAL FIT

- Position your thumbs at points 1 and 2.
- Gently bend the temple tip upward, up to 20 mm, to achieve a 6 mm tip displacement.
- Do not bend the temple in the red-marked area.
- Begin with small, incremental adjustments.
- Repeat the bending gradually until the 6 mm displacement is reached.
- Avoid overbending the temple tip.

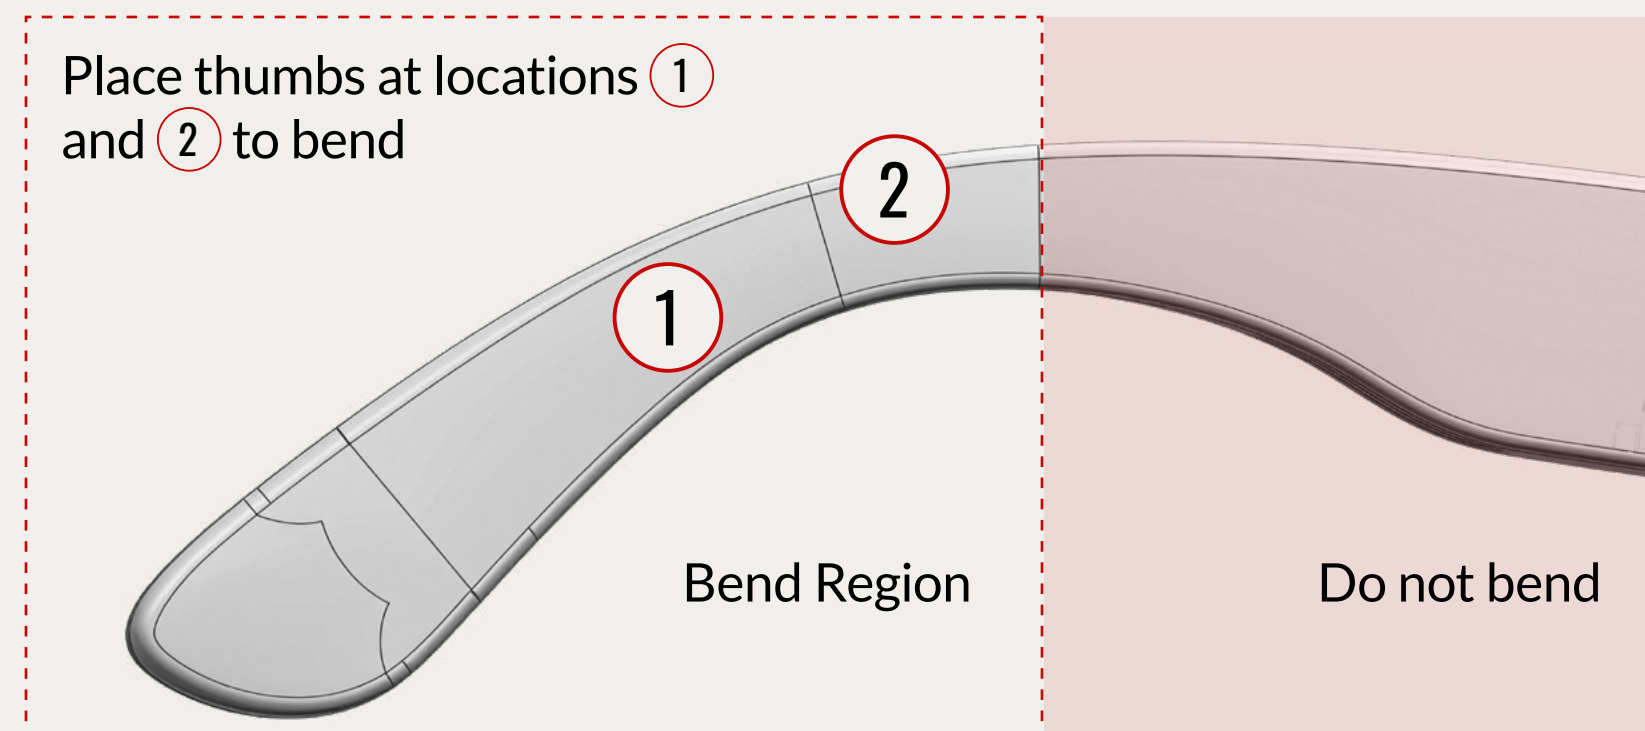

NO HEAT

Do not apply heat to the glasses or the temple tip region. Heat can damage the specialized materials.



INWARD BEND ONLY

Only bend the temple tips inward as shown in the diagram. Follow the green checkmark direction.



NO VERTICAL BENDING

DO NOT bend in any other direction (up or down). This will damage the product.


*Only manual fitting, not suitable for heat adjustment.

**A metal core inside the temples allows for inward only adjustments. The adjustment point is visible on the outer side of transparent frames and tactilely marked with dots on the inner side of the temple tips on non-transparent frames.

***For optimal results, the flexible temple tips should be professionally shaped in-store to match the wearer's head. We recommend to visit a local store for a quick adjustment and a fit that feels truly tailored.

OVER-EXTENSION HINGES

The over-extension hinges provide 10° of additional rotational range, allowing the frame to adapt more naturally to different head shapes for a more comfortable fit from day to night.

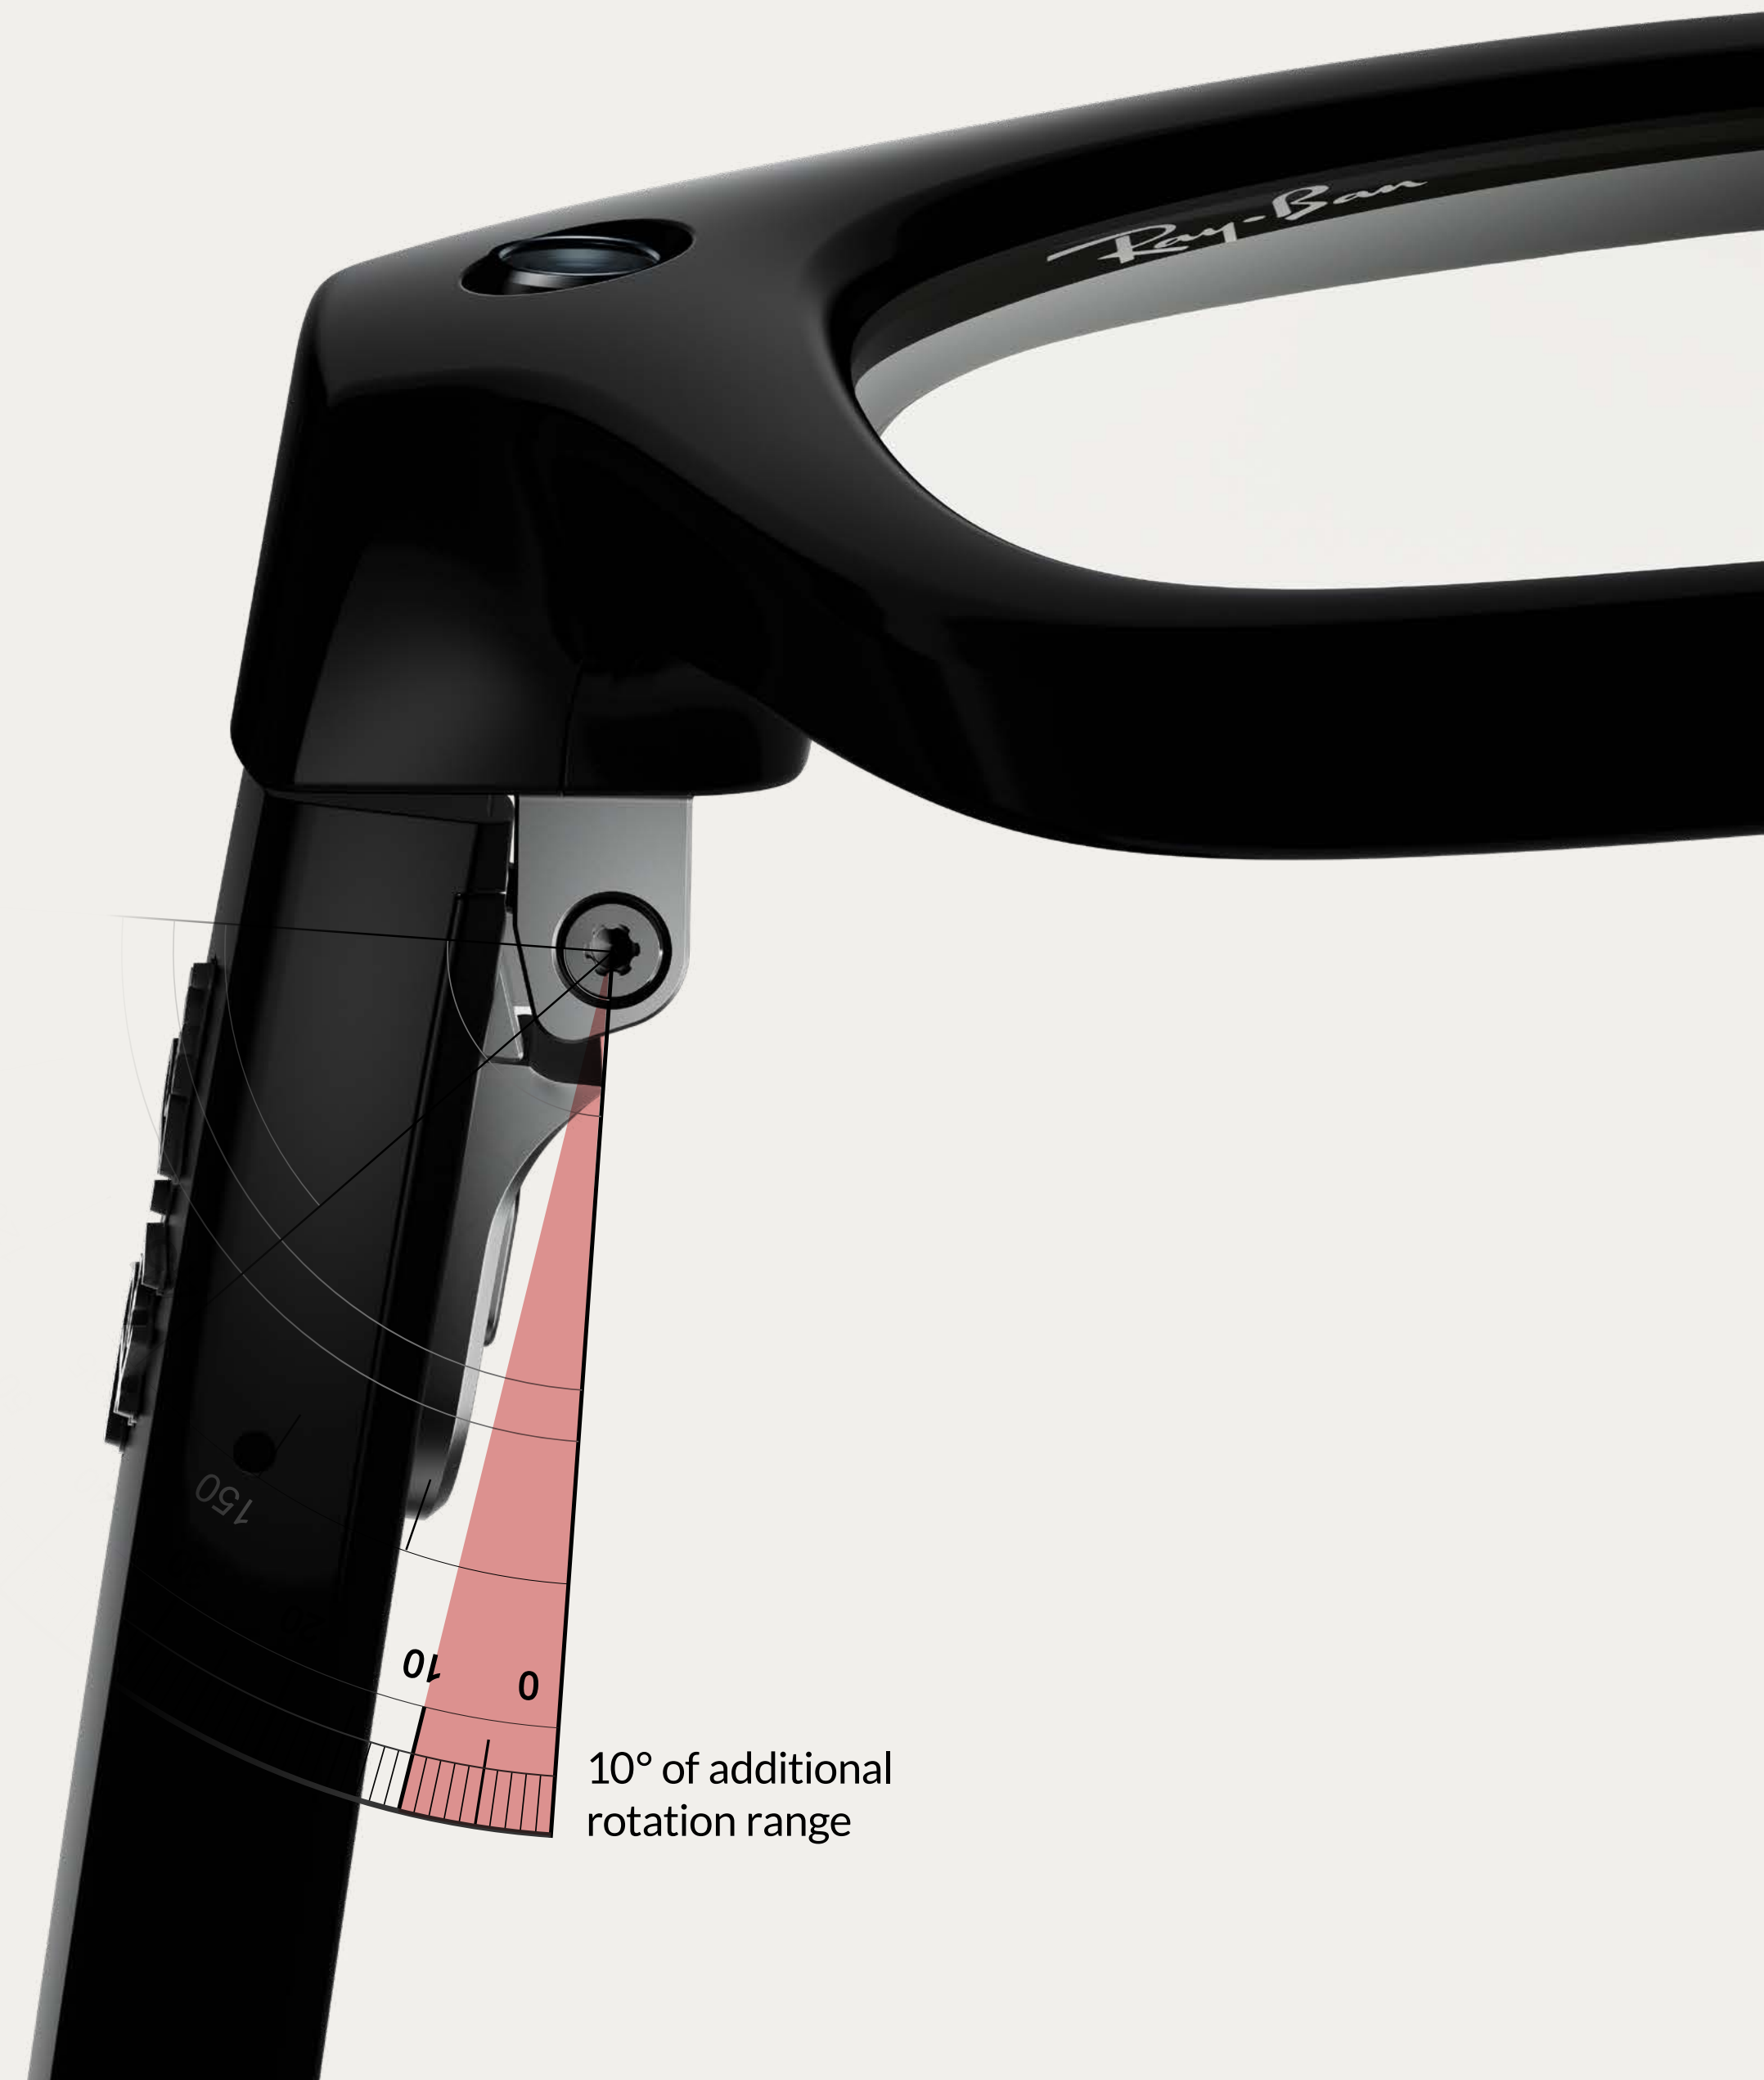

10° of additional
rotation range

THINNER FRONT FRAME DESIGN

A slimmer front frame design minimizes visual weight, delivering effortless comfort and a refined, modern look for all-day wear.





FUNCTIONALITIES

KEY FEATURES



LISTEN

Listen to music and more with discreet open-ear speakers that deliver rich, quality audio without blocking out conversations or the ambient noises around you.



META AI*

Chat with Meta AI to get on-the-go suggestions, answers and reminders. Simply ask your AI glasses to brainstorm recipes for tonight's dinner as you wander the grocery aisles. Or remind you where you parked.



HANDS FREE COMMS**

Send text or voice messages, make phone calls***, and take video calls hands-free all from your AI glasses. It's great for work calls on the go, sharing epic views while on vacation, or video calling your parents to make sure you're getting that family recipe just right.



LIVE TRANSLATION

With live translation, seamlessly explore new countries or connect with people who speak different languages. Converse in real-time between French, Italian, Spanish, English and more. Translations are audible through your glasses and visible as a transcript on the Meta AI app, helping you connect effortlessly without Wi-Fi.



CAPTURE

Capture photos and videos hands-free with an ultrawide 12 MP camera. With improved 3K ultra HD video quality you can record sharp memories with rich details.

The Capture LED lets other people know when you're capturing content or going Live and during video calls. If the Capture LED is covered, you'll be notified to clear it.

NEW



BATTERY SAVER

Extend battery life by reducing power consumption, temporarily reducing or disabling certain non-essential features and background activities to keep the user going longer.

* Certain Meta AI features only in select countries and languages. Please check local availability. Meta account and Meta companion app required. For ages 13+ only. Requires compatible phone with Android or iOS operating system plus wireless internet access. Features, functionality and content are subject to change or withdrawal at any time. Additional account registration, terms and fees may apply. Software updates may be required. Performance may vary based on user location, device battery, temperature, internet connectivity and interference from other devices, plus other factors. User must comply with all applicable local laws and regulations, especially relating to privacy. May interfere with personal medical devices. Check manufacturer "<https://www.meta.com/help/smart-glasses/articles/legal-and-privacy-information/smart-glasses-warranty-and-safety/>" Safety & Warranty Guide and "<https://www.meta.com/smart-glasses/#faq>" FAQs for more product information, including "<https://www.meta.com/en-gb/help/smart-glasses/articles/ray-ban-meta/battery-life-ray-ban-meta-smart-glasses/>" battery life.

** Hands free video calling available on WhatsApp, Messenger, and Instagram. Calling on WhatsApp, Messenger, and Instagram may not be available in the UAE.

***Works with Messenger, WhatsApp, Instagram and your phone

LISTEN

OPEN EAR-AUDIO

Enjoy seamless, hands-free listening on your favorite audio apps just by saying “Hey Meta.”

Connect Spotify, Apple Music, or Audible to your Meta AI Glasses, then use your voice to play music, podcasts, or audiobooks without touching your phone. Meta AI works with your connected apps to understand your taste, identify songs, and tailor recommendations to your moment or mood.

Discreet open-ear speakers deliver rich, private sound while keeping you aware of your surroundings, and five built-in microphones ensure crisp audio for calls. Whether you’re on the go or relaxing at home, you can enjoy immersive audio without ever needing headphones.

CONTROL PLAYBACK

- TAP ONCE ON THE RIGHT TEMPLE SIDE TO PLAY OR PAUSE
- DOUBLE-TAP TO SKIP FORWARD
- TRIPLE TAP TO SKIP BACKWARDS
- SAY “HEY META, PAUSE” OR “...NEXT”

ADJUST VOLUME

- SWIPE FORWARD TO TURN UP THE VOLUME SWIPE BACK TO TURN DOWN THE VOLUME
- SAY “HEY META, VOLUME UP” OR “...VOLUME DOWN”

MANAGE CALLS

- DOUBLE-TAP TO ANSWER DOUBLE-TAP TO END TAP AND HOLD TO REJECT

NEW



IMPROVED AUDIO

Enhancing our most used Ray-Ban Meta feature to make open-ear audio even more immersive.

Spatial audio for media and calls, discreet mode, and wind suppression deliver clearer sound with less distortion and greater depth.

Stay heard loud and clear with our smart noise reduction, even on the breeziest days. Your voice gets VIP treatment, wherever you are.



CAPTURE

CAPTURE HANDS-FREE 3K ULTRA HD VIDEO

Capture what you see and hear without taking out your phone. Say “Hey Meta, take a photo” to capture vivid photos while keeping your hands free to walk the dog. For life's important moments, the ultrawide 12 MP camera now captures high quality 3K ultra HD videos with precision and clarity.

With adjustable stabilization, you can control the level of stabilization applied to your videos, or automate with auto-select.

CAPTURE BUTTON

- PRESS ONCE TO TAKE A PHOTO
- PRESS AND HOLD TO START RECORDING
- PRESS AGAIN TO STOP RECORDING

HANDS-FREE CAPTURE

- SAY “HEY META” FOLLOWED BY A COMMAND (E.G. “TAKE A PHOTO”) FOR A HANDS-FREE CAPTURE

NEW



IMPROVED CAPTURE MODES

Hands-free filming is getting an upgrade with two new features.

- **HYPERLAPSE:** you have a whole new way to capture your leisurely walk through a botanical garden or your commute across a historic bridge. Simply say, “Hey Meta, start hyperlapse.”
- **SLOW-MOTION:** you can create a dramatic effect with liquid smooth playback. Say “Hey Meta, start slow motion” to capture your best latte art pour.



*Meta AI assistance must be the wake-word enabled for voice command within the app. Alternatively, you can tap and hold to activate voice command(s).

SHARE PHOTOS & VIDEOS

DIRECTLY WITH YOUR FRIENDS ON WHATSAPP,
MESSENGER, AND YOUR PHONE

Now you can send photos and videos to your friends on Messenger, WhatsApp, Instagram, and your phone's native messaging provider directly from your Ray-Ban Meta glasses using just your voice.

“Hey Meta, send photo to [friend or group chat] on Messenger/WhatsApp/Instagram.”



*Meta AI assistance must be the wake-word enabled for voice command within the app. Alternatively, you can tap and hold to activate voice command(s).



CALL & VIDEO CALL

ON WHATSAPP, MESSENGER,
AND YOUR PHONE



No more stopping to answer your phone. Make calls and send messages on WhatsApp, Messenger, Instagram and your phone, completely hands-free simply by using voice commands

During video calls, instantly flip between your phone's camera and the hands-free POV camera, giving the person you're calling a whole new view. It's great for moments when you want to show exactly what you see hands-free, like sharing an epic view on vacation, or getting on-the-fly cooking tips while you're busy chopping.



VOICE MESSAGING



Send and receive voice messages hands-free with WhatsApp, Facebook Messenger or Instagram Direct. Ask Meta to send a voice message, then record a spoken message up to 1 minute without having to take out your phone. It's a great way to stay immersed in the present while connecting with others in a more personal and expressive way.

“Hey Meta, send a voice message to Mark on WhatsApp/Messenger/Instagram.”

“Hey Meta, play message from Pavan”.

* Calling on WhatsApp, Messenger, and Instagram may not be available in the UAE.

** Available in all RBM markets now. Users must connect their phone, WhatsApp, Messenger and/or Instagram accounts to send and receive text messages Voice messaging only available on WhatsApp, Messenger and Instagram.


NEW ACTION BUTTON

ONE PRESS AND YOU'RE IN CONTROL


The new dedicated action button provides instant, one-touch access to the features users rely on most, delivering a fast, intuitive, and seamless experience.

The button is fully customizable, allowing users to assign a wide range of actions based on their daily needs.


- **Meta AI:** Communication, Live AI (video), MMAI (capture), Custom prompts
- **Camera:** Autocapture, Hyperlapse, Slow Motion
- **Live Translation:** Start/End Session
- **Accessibility:** Be My Eyes, Hearing Boost, Screen Reader
- **Quick Connect:** Text, call or voice one of your priority contacts
- **Music:** Play from default music app, Shazam a song
- **Health:** Get metrics from Garmin, Food logging
- **Productivity:** Audio Notes, Reminders, Next event

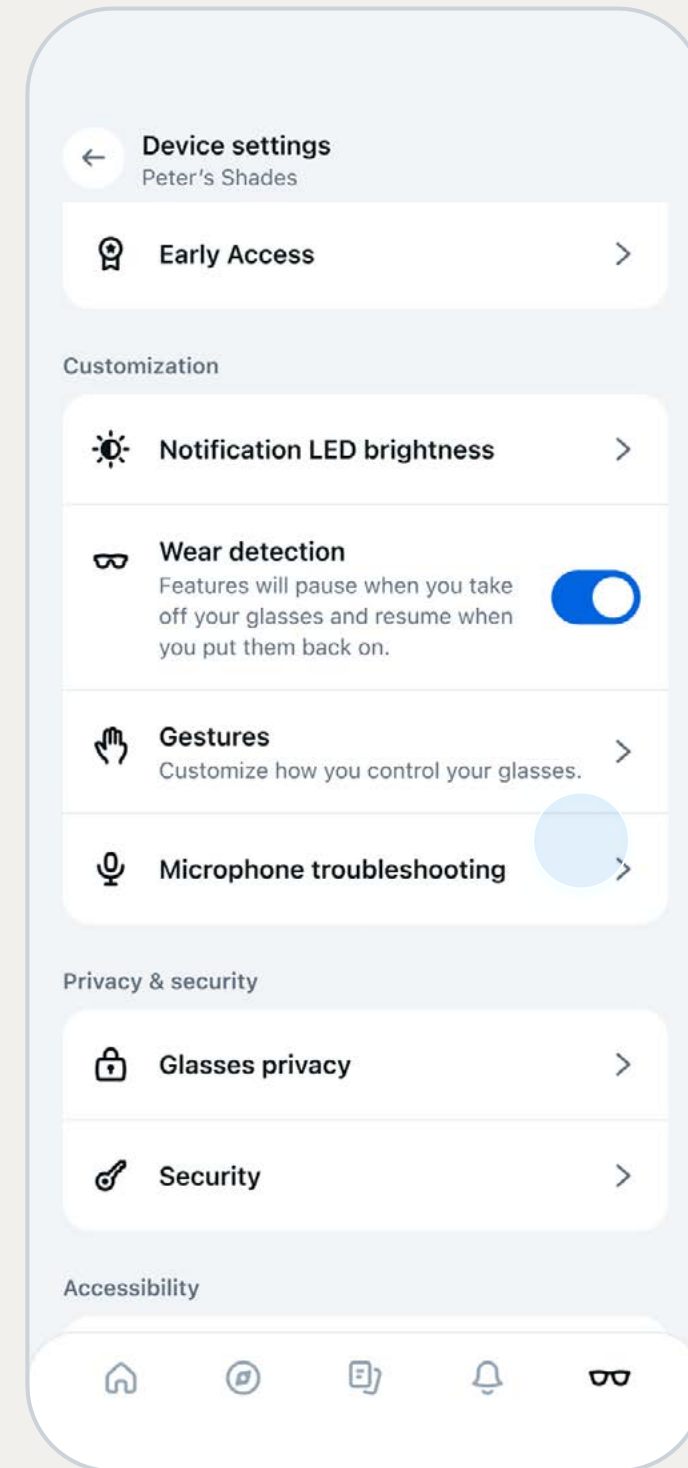


Device Settings

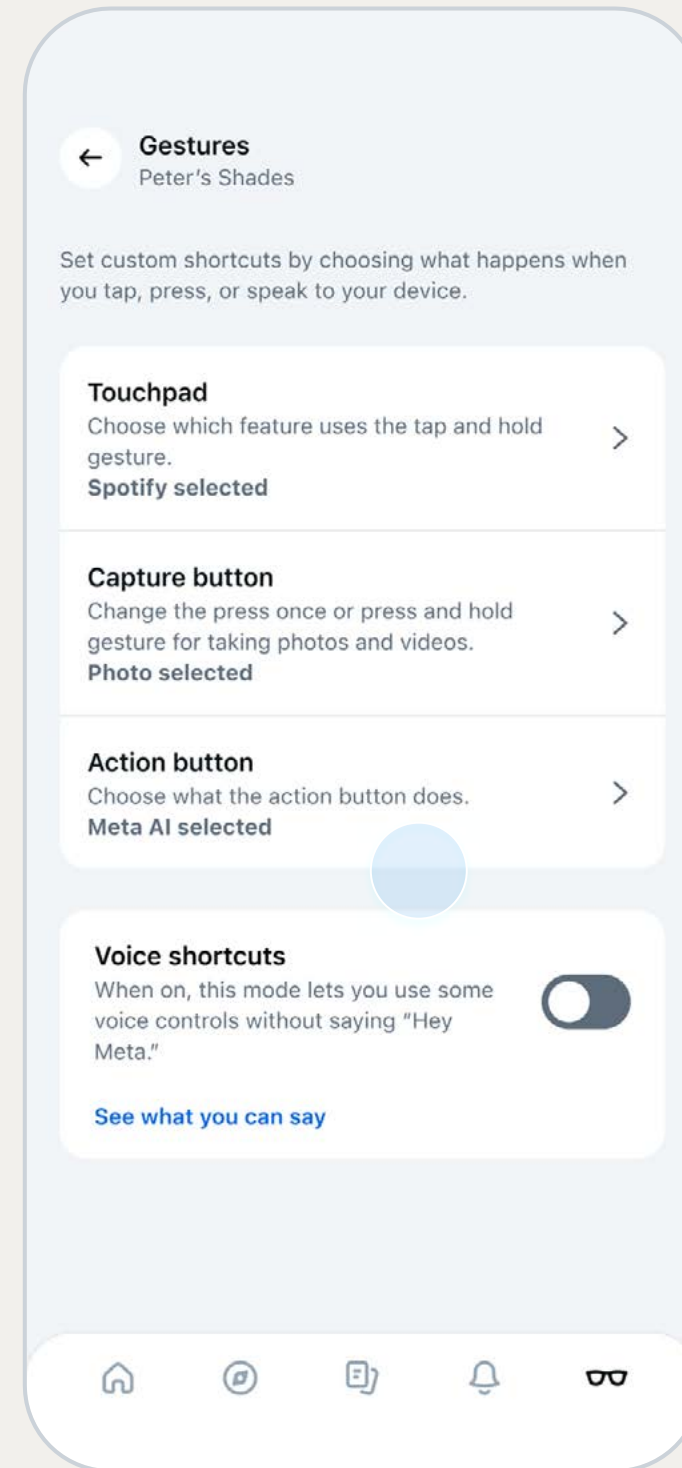


Gestures

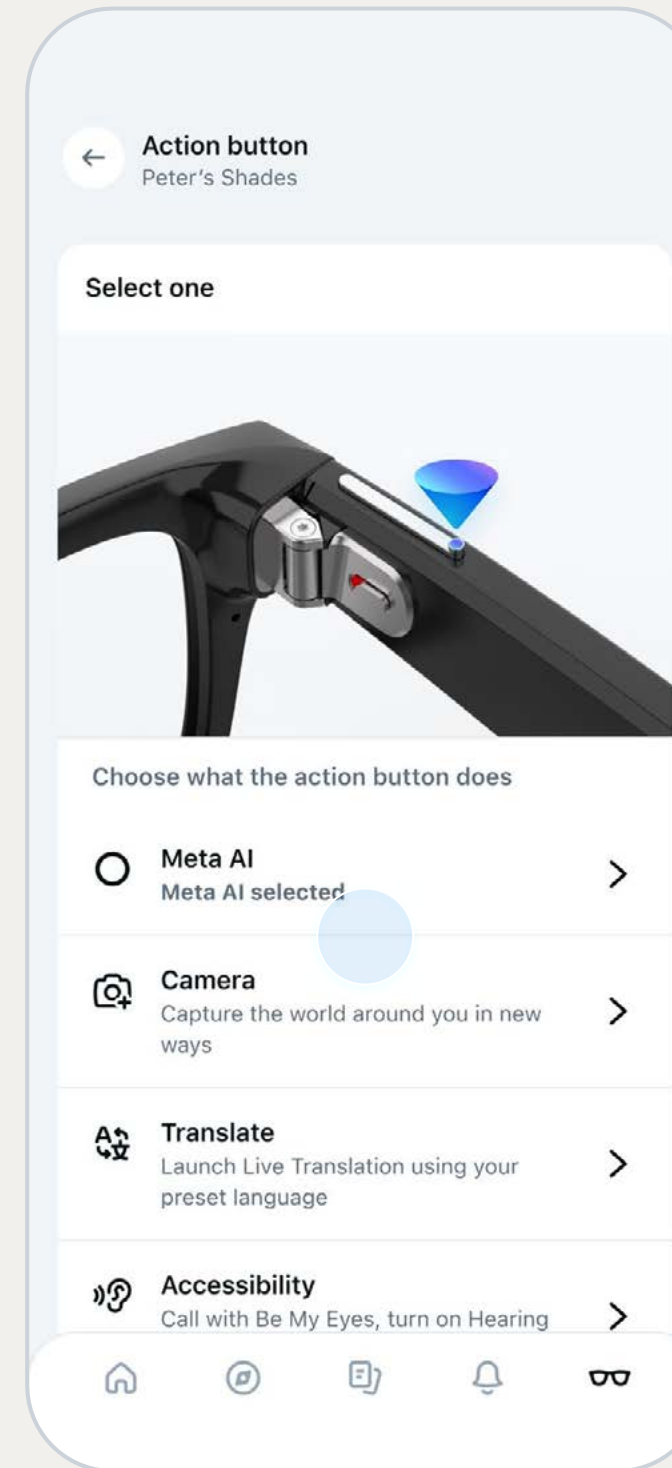

Action Button

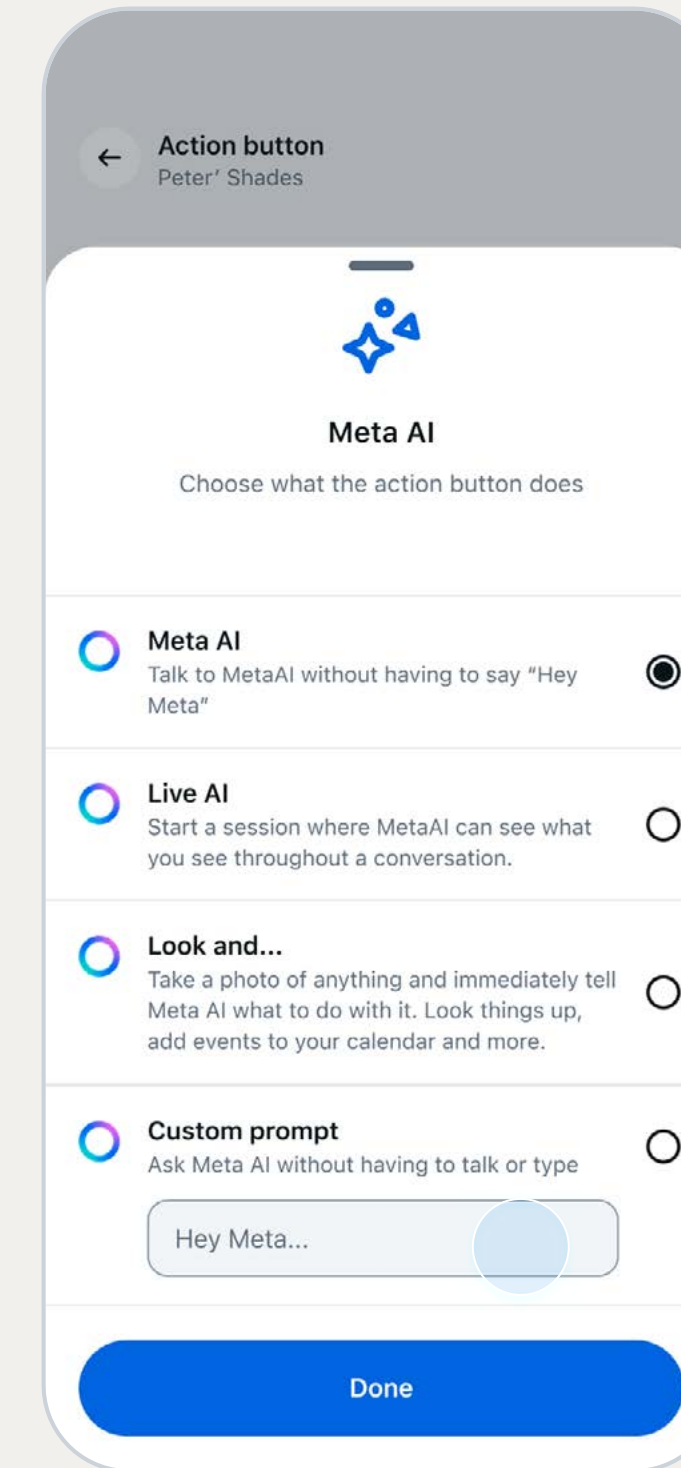

Domain (AI)

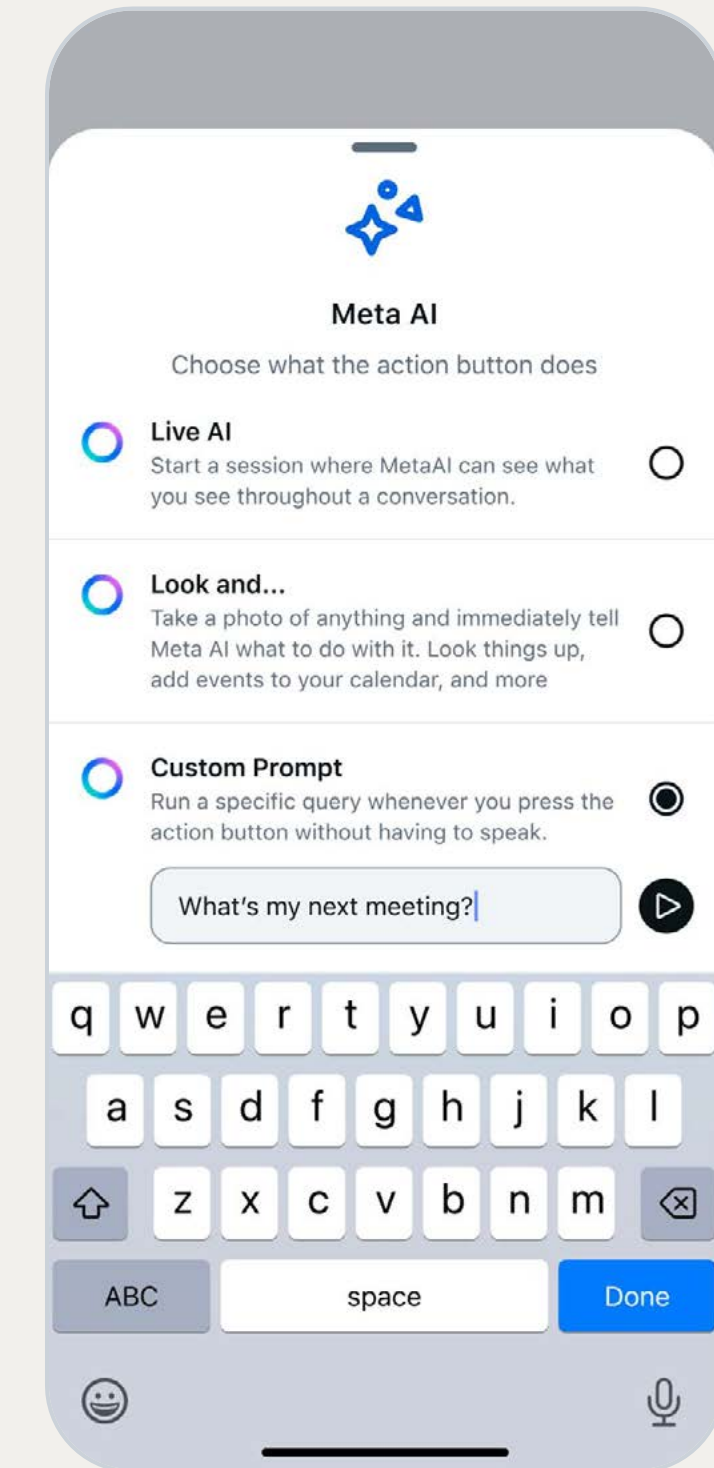

Custom Prompt

META AI
EXPERIENCE

META AI

ASK YOUR GLASSES ANYTHING WITH META AI



Chat with Meta AI to get real-time suggestions, answers, and reminders. Just ask your glasses.

Whether you're brainstorming dinner recipes as you wander the grocery aisles, need a reminder of where you parked, or want to learn about landmarks as you travel, Meta AI is there.

Use live translation to have back-and-forth conversations in different languages.

Meta AI can also analyze your surroundings, provide context-rich suggestions, control features, scan QR codes, or note information for you to recall later.

Move effortlessly through your day with contextual AI that reacts to what you see.

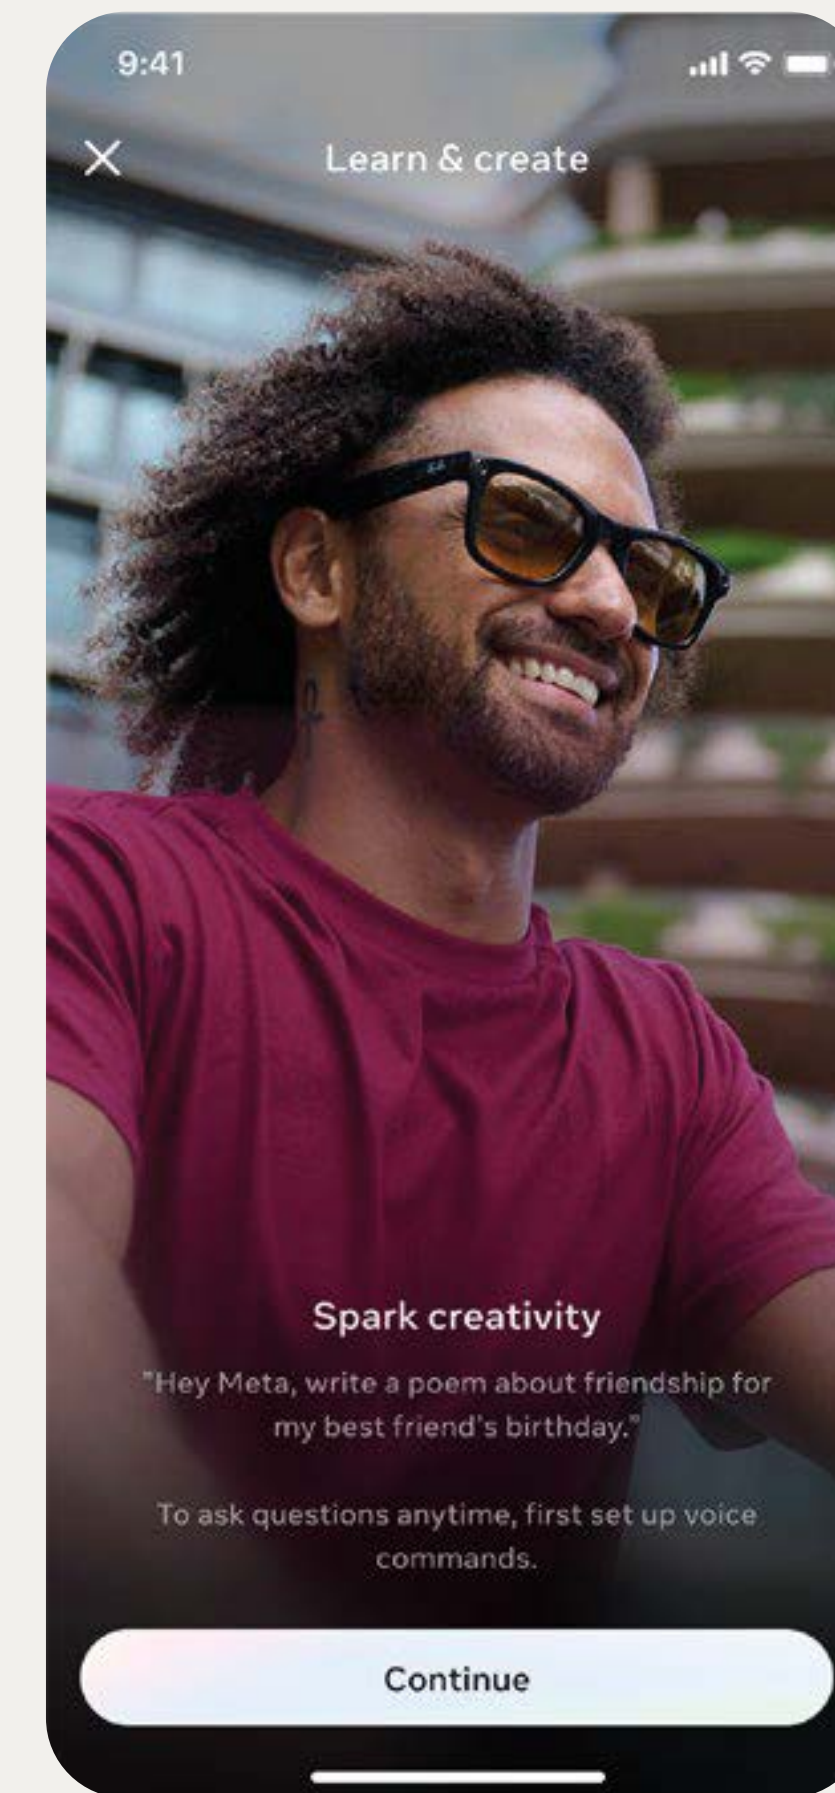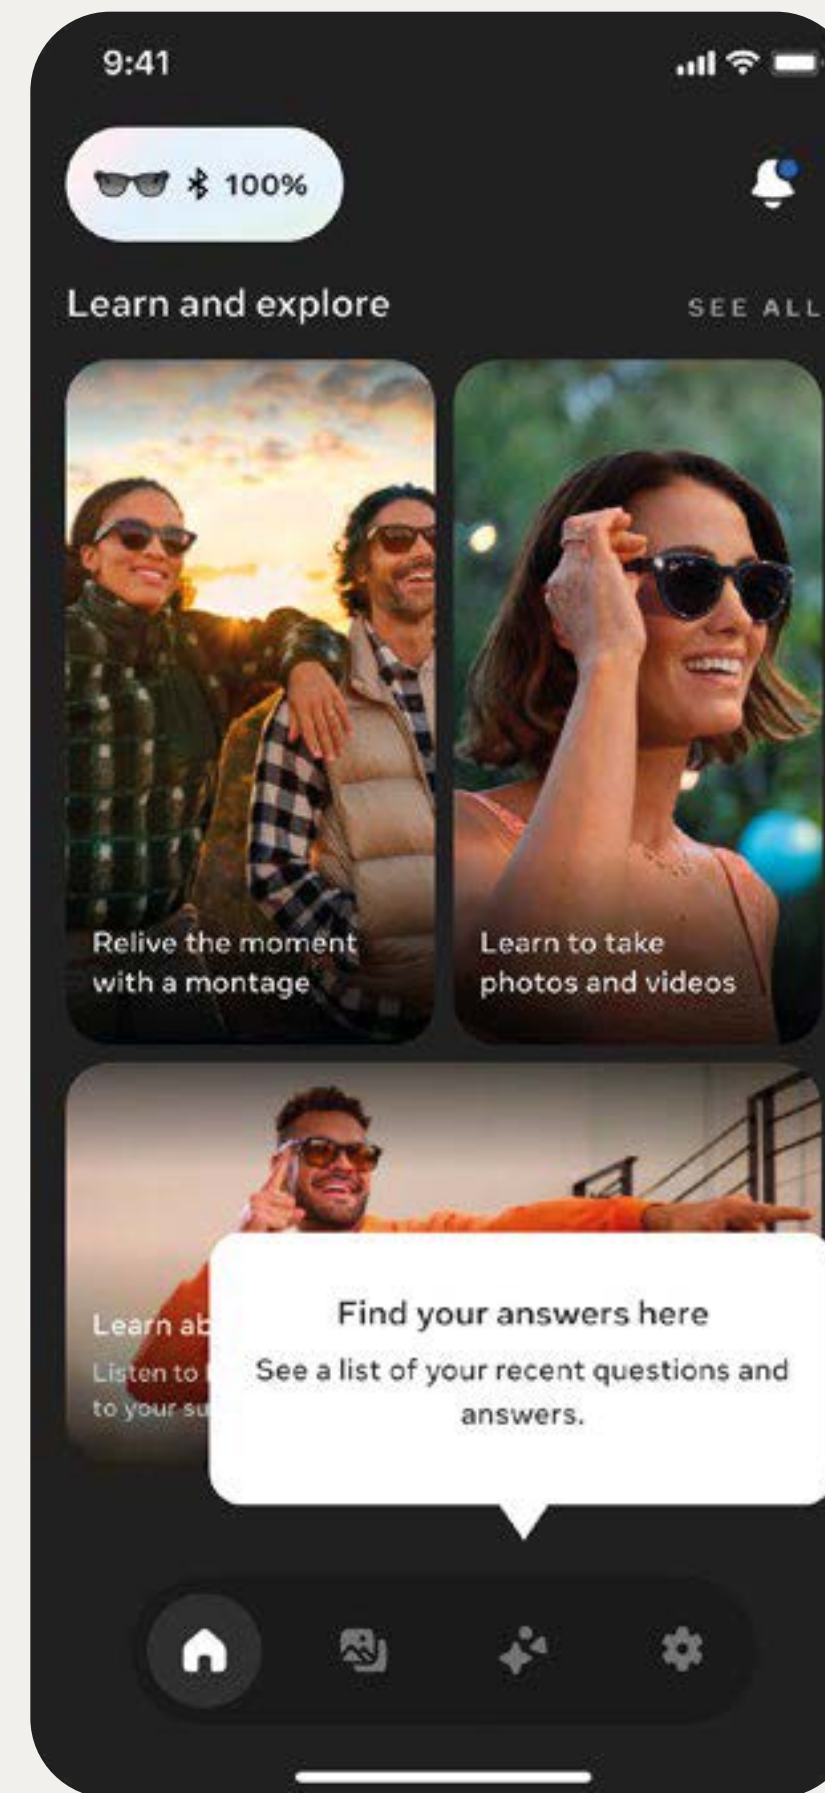

META AI

OBJECT IDENTIFICATION

Get information about what you see, identify objects or describe what you're looking at.

"Hey Meta, what does this fruit taste like?"

"Hey Meta, how often should I water this plant?"

"Hey Meta, what am I looking at?"

HISTORY TAB

Enable users to see and interact with a history of responses from Meta AI so they can:

- refer back to things they heard to better understand and remember them (e.g. interesting information or translations).
- use information in the moment (e.g. ingredients in a recipe when shopping).
- share a response with others (e.g. funny or entertaining responses).
- report inaccurate content.

TEXT TRANSLATION

Translate text and signs around you.

"Hey Meta, tell me what this word means"


"Hey Meta, translate this text."

RECOMMENDATIONS

Get creative recommendations on the go.

"Hey Meta, where's the best time to catch the sunset?"

"Hey Meta, tell me a good recipe to make from these ingredients."

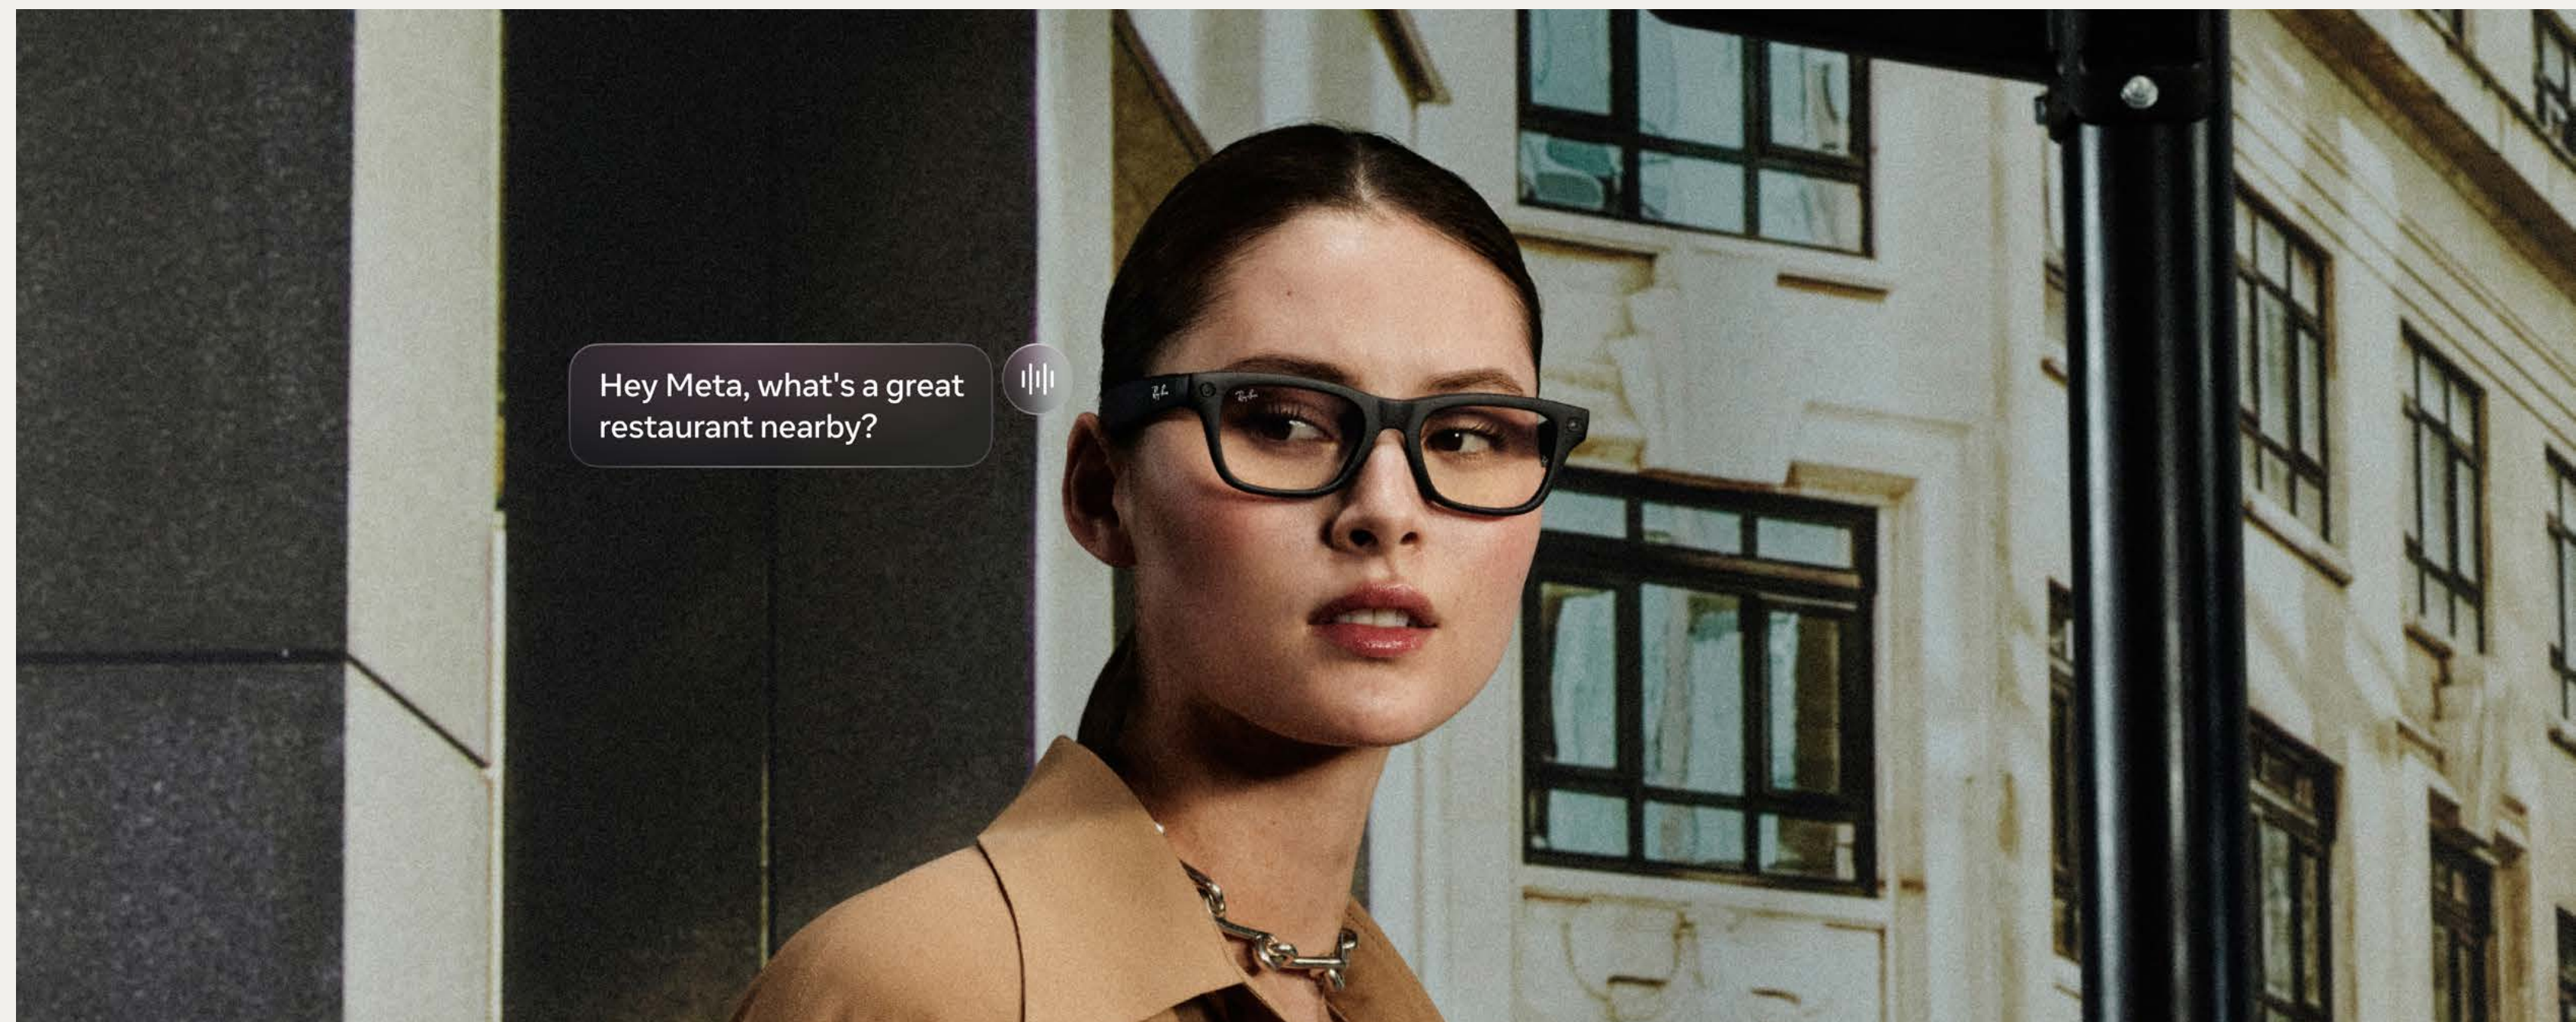

META AI


TEXT ACTIONS

Interact with text you see in the world. Engage with written text in new and helpful ways with Text Actions.

When prompted, your glasses will analyze what you're looking at, then extract and interpret the text or numbers within the scene.

Call the number on a business card, summarize long text on a sign or turn the writing on a poster into a haiku.

You can even translate text to the language of your choice or scan a QR code to get information about what it unlocks. It's a simple tool that streamlines complex tasks.

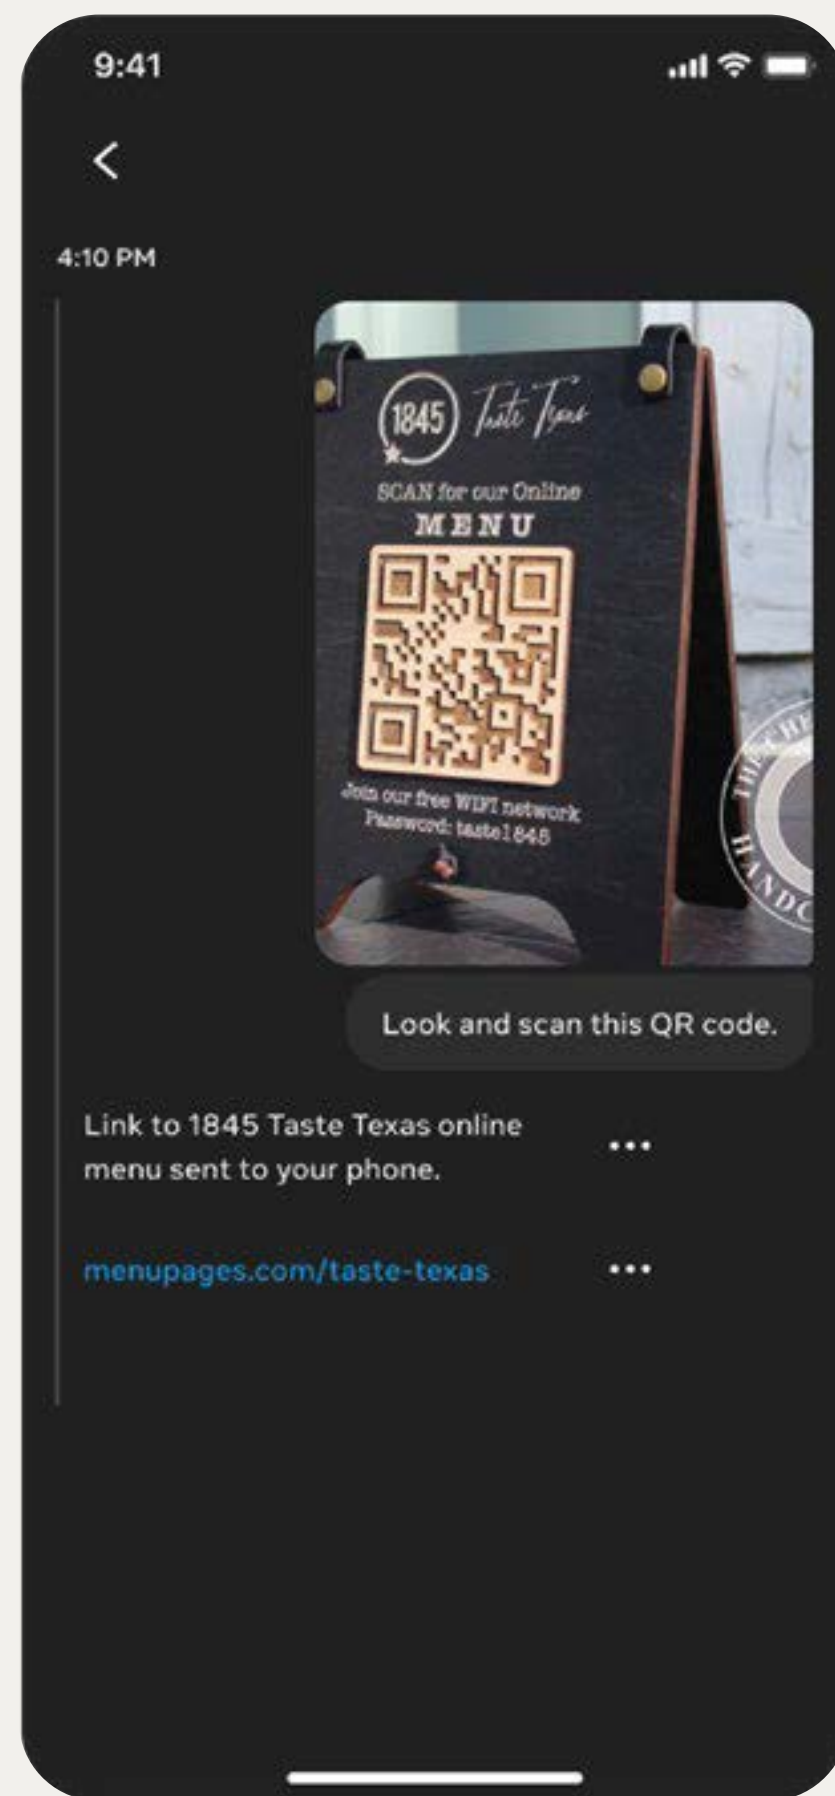

REMINDERS

Ask Meta to capture information most important to you like.

Stay in the moment and capture all the information you need hands-free with Reminders on Ray-Ban Meta.

Meta will capture a photo and extract the important information for you so you can stay hands free and in the know.

“Hey Meta, remember this parking spot number”

“Hey Meta, remind me to buy this tomorrow”

You can search your reminders at any time just by asking,

“Hey Meta, search my reminders, what do I need to buy tomorrow?”

“Hey Meta, what’s my parking spot number?”



*Certain Meta AI features only in select countries and languages. Please check local availability.

META AI

LIVE TRANSLATION

With live translation, you can have a conversation with someone who speaks another language and hear translations in real time between French, Italian, Spanish, English, Portuguese, German, and more.

Translations play back through the open ear speakers on your glasses and are viewable as a transcript on the Meta AI app. It's great for exploring a new country in a deeper way and connecting with new friends.

“Hey Meta, start live translation.”

or initiate directly from the Meta AI app.



LIVE AI

Converse naturally with Meta AI while it understands the context around you. Whether it's touring a new city, meal planning at the grocery store, or styling your wardrobe, Meta AI sees what you see to help you with your daily activities. Without wake words or pauses

to take pictures for analysis, live AI's quick context- rich responses allow users to have more natural conversations.

“Hey Meta, start Live AI.”



*Certain Meta AI features only in select countries and languages. Please check local availability.

**Live translation does not require network or internet connectivity. Simply download a language pack before you go and you can use it while traveling.

***A Live AI session will last about 30minutes on a full charge.

ACCESSIBILITY



BE MY EYES

Call a Volunteer connects those who are blind or low vision with a Be My Eyes' sighted volunteer who can assist in helping with everyday tasks, like adjusting a thermostat, or sorting and reading mail*.

Say "Hey Meta, call a volunteer on Be My Eyes" and your glasses will start a hands-free video call with a sighted volunteer who can see through the POV video camera on your behalf.

Get the help you need in real-time while your hands remain free to complete your daily tasks.

Start from glasses: "Hey Meta, start Be My Eyes."

Or Launch a session through Be My Eyes app

SCENE READER

For those seeking deeper customization, Ray Ban Meta glasses offer enhanced functionality. Ask to read text verbatim and Meta AI will read out exactly what's in front of you, like the text on a birthday card or a sign. When responses are set to "detailed/verbose", you can ask questions about your environment and you'll hear a more extensive level of description of the objects and environment around you. It can even detect low light or when an object you're asking about is out of frame. All responses are delivered through discreet open-ear speakers that only you can hear.

* English language support in 21 Markets in September: US, CA, UK, AU, FR, IT, ES, IE, AT, BE, IN, MX, SE, DK, FI, DE, NO, UAE, NL, BR, CH

**The feature is currently available in the following languages: EN, FR, IT, ES, DE, PT, and HI.

***Certain Meta AI features only in select countries and languages. Please check local availability.



PARTNERSHIPS



SPOTIFY, AMAZON MUSIC, IHEARTRADIO, AUDIBLE, SHAZAM, APPLE MUSIC

Expand search and initiating audio playback across more popular services*. Control media & save progress. Identify song playing in ambient environment (Shazam).

“Hey Meta, play Taylor Swift on Spotify.”

“Hey Meta, what song is this?”

More ways to initiate and control over music across popular services.

STRAVA

Strava athletes can now overlay their performance metrics directly onto their photos and videos captured with their Ray-Ban Meta. This integration lets you create dynamic, shareable moments that show off both your effort and your perspective on the move.

Media captured during your activity can be shared to the Strava activity recorded at that same time, allowing your photos and videos to pair with your workout automatically.

You can also share your media on Instagram, Facebook, and other social media platforms.

GARMIN

Connect your Garmin account to the Meta AI mobile app to get smarter workout insights. During a workout, Meta AI can generate quick insights such as summarizing the workout, providing key stats (e.g., pace, heart rate), or aggregating metrics (e.g., averages, min, max) during your workout. You can also compare your real-time performance with past workouts to understand changes in performance. Meta AI is optimized to support walking, hiking, running, and biking activities



*Apple Music, Audible, iHeartRadio, Shazam: Available in the US in English only. Spotify & Amazon Music: Available in all territories in English only.

**Check list of compatible Garmin devices.

NEW META AI EXPERIENCES

PERSONAL TIMELINE

Powered by low-power AI with images taken throughout the day, Personal Timeline brings context about the user in a way that allows Meta AI to become the most personalized assistant in the world.

- Conversation Recall (WhatsApp, Facebook, Instagram)
- Audio Notes / Captions / Meeting Notes
- Nutrition
- Life Organization (Lists, Contextual Reminders, Apple Calendar)

BOOKING AGENT


Meta AI works with your favorite apps or services and takes action for you.

- Booking a restaurant reservation (e.g. Open Table, Resy)
- Booking a car ride (Lyft)
- Get details and booking links for activities and travel



NUTRITION

With Nutrition, tracking what you eat becomes effortless. People care deeply about eating healthy, but logging meals can feel tedious and the benefits aren't always immediate. Meta AI make it simple by fitting seamlessly into your day.

- Log food and drinks using photos or voice.
- Let autotracking capture meals so you never forget.
- Get personalized insights and recommendations.

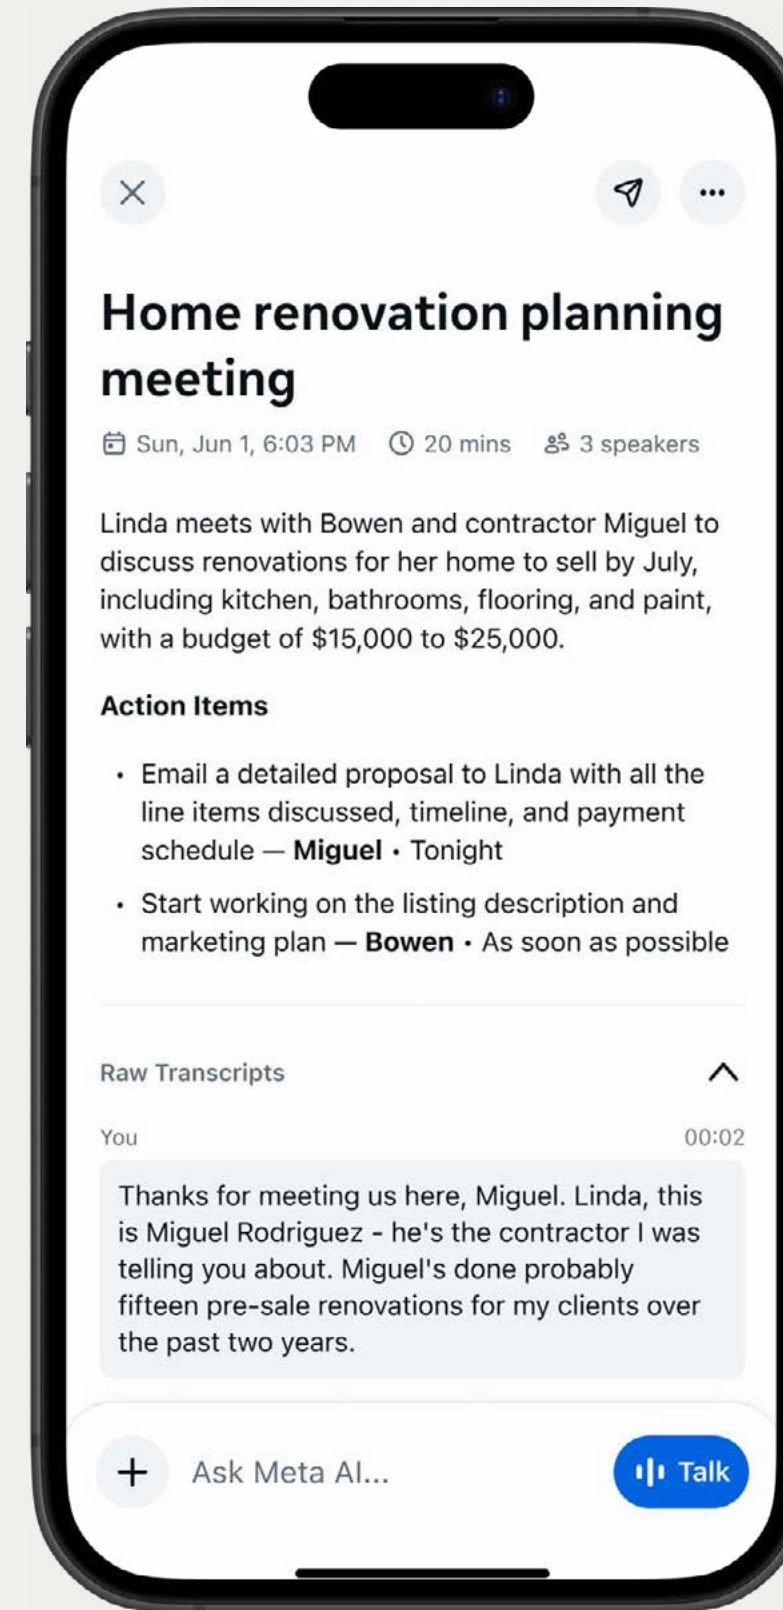

Personal Timeline

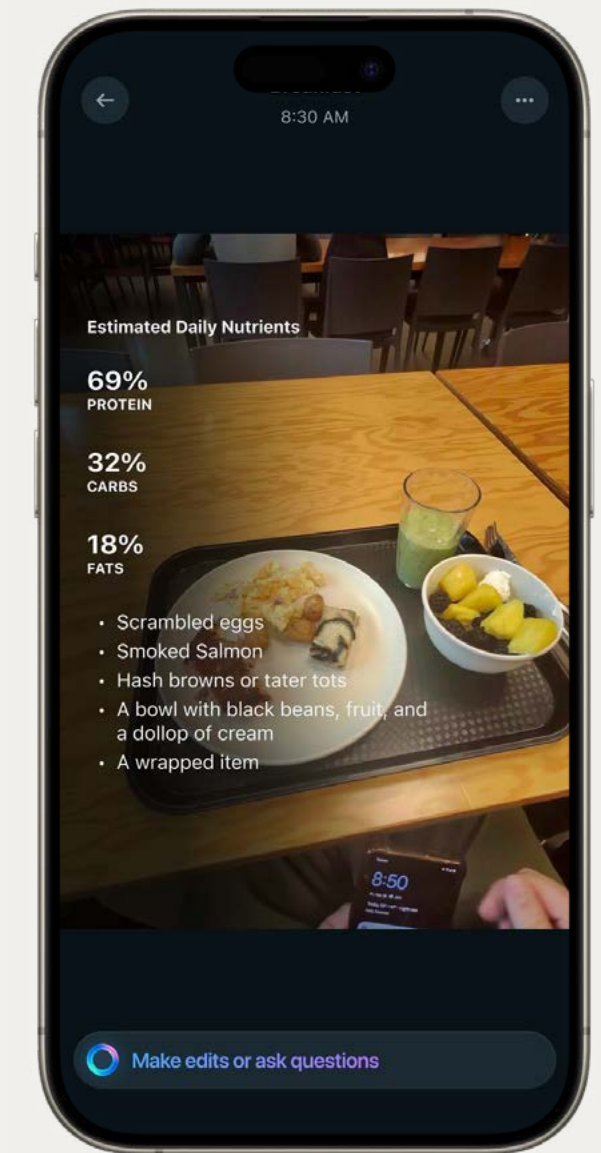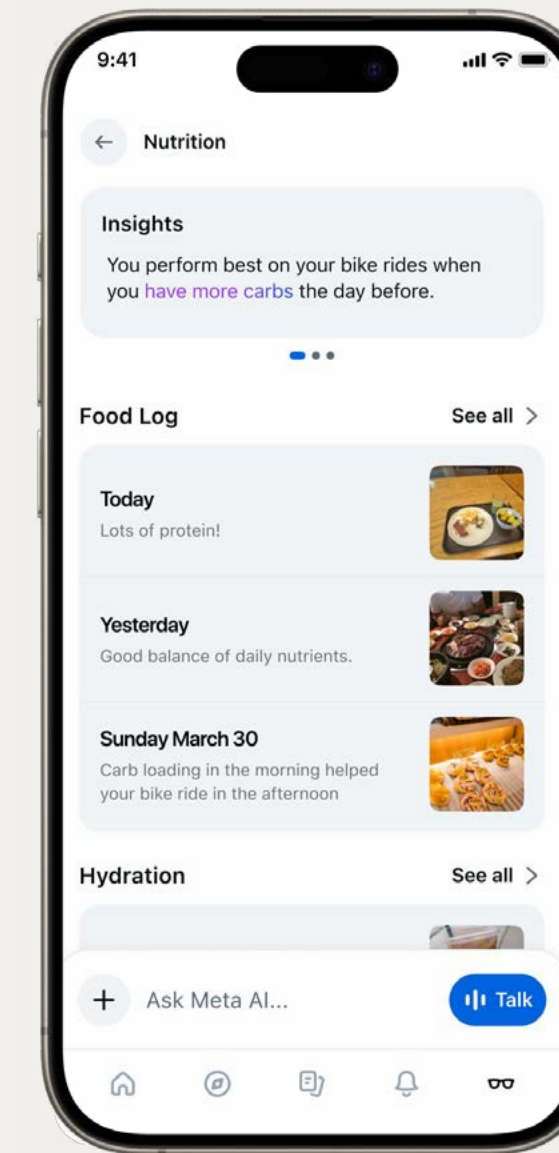

Nutrition

Launch timing may vary by market. Availability is limited to select countries and languages.



NEW
STYLES

RAY-BAN META BLAYZER OPTICS (GEN 2)

RECTANGLE

REGULAR

- Lens width (mm) - 50
- Temple length (mm) - 150
- Bridge width (mm) - 19
- Weight (g) - 49.67

LARGE

- Lens width (mm) - 54
- Temple length (mm) - 155
- Bridge width (mm) - 19
- Weight (g) - 52



RAY-BAN META SCRIBER OPTICS (GEN 2)

PANTHOS

- Lens width (mm) - 49
- Temple length (mm) - 150
- Bridge width (mm) - 22
- Weight (g) - 51.08



NEW SEASONAL COLORS

INSPIRED BY LIGHT AND TRANSPARENCIES

3 Spring Summer 2026 color capsules SKUs

This spring, upgrade your everyday glasses with Ray-Ban Meta glasses in two new, limited-time seasonal colors. The new Blayzer Optics Matte Transparent Ice Grey and Scriber Optics Transparent Stone Beige are available in Clear or Transitions® Color Touch™. Enjoy standout style and all-day comfort.

BLAYZER OPTICS MATTE TRANSPARENT ICE GREY CLEAR DEMO LENSES

REGULAR | LARGE
ORW7001 8529 50
ORW7001 8529 54



SCRIBER OPTICS TRANSPARENT STONE BEIGE CLEAR DEMO LENSES

ORW7002 8531 49



THE ASSORTMENT

ONLY AVAILABLE WITH CLEAR DEMO LENSES TO BE REPLACED WITH RX LENSES

CORE COLLECTION

SPRING-SUMMER 2026

BLAYZER OPTICS REGULAR

TRANSP. BLACK
ORW7001 8526 50



MATTE BLACK
ORW7001 2077 50



TRANSP. DARK OLIVE
ORW7001 8530 50



MAT. TRANSP. ICE GREY
ORW7001 8529 50



BLAYZER OPTICS LARGE

TRANSP. BLACK
ORW7001 8526 54



MATTE BLACK
ORW7001 2077 54



TRANSP. DARK OLIVE
ORW7001 8530 54



MAT. TRANSP. ICE GREY
ORW7001 8529 54



SCRIBER OPTICS

TRANSP. BLACK
ORW7002 8526 49



SHINY BLACK
ORW7002 2000 49



TRANSP. UMBER
ORW7002 8532 49



TRANSP. STONE BEIGE
ORW7002 8531 49



A young man with curly brown hair is the central focus of the image. He is wearing black Ray-Ban smart glasses with a small camera lens on the right side. He is also wearing a light blue denim jacket with a wide collar. The background is a dark, textured grey. The text 'LENS SOLUTIONS' is overlaid in white at the bottom center.

LENS
SOLUTIONS

VISION BUILT FOR THE AI AGE

TO UNLOCK THE FULL POWER OF RAY-BAN META, VISION HAS TO KEEP UP.

- Closer-than-ever viewing & a heavy near-vision load
- 150,000+ focus shifts a day — multitasking nonstop
- Always on the move — any place, any light, any speed
- Camera-ready clarity for every capture

This is why your lenses matter more than ever.

Ray-Ban | ∞ Meta



Ray-Ban | ∞ Meta



THE AI EXPERIENCE STARTS WITH SMART VISION

ENHANCE HOW YOU WORK, MOVE, CONNECT AND CAPTURE IN THE AI ERA.

ALL-DAY COMFORT FOR PRODUCTIVITY

SINGLE VISION WEARERS

Relax and protect your eyes

- Reduced eyestrain*
- Relaxed eyes
- Improved contrast
- Blue-violet light filtering**

PRESBYOPES

Made for long days and fast moves

- Sharp at every distance
- Fast-to-focus vision
- Natural posture all day
- Boosted Contrast
- Sharp Vision in motion with Varilux® XR series™ lenses

DYNAMIC VISION TO NAVIGATE

DYNAMIC LENSES TO MOVE FREELY IN ANY LIGHT

- Fast Vision recovery from bright to dim light***
- Seamless adaption indoors/outdoors
- Blue-violet light filtering and 100% UV protection**

TRUE VIEW TRANSPARENCY TO CONNECT

MAXIMUM NATURAL LOOK

- Almost un-noticeable residual color
- Great with Transitions® with true-to-tone color

MINIMUM REFLECTION

- Superior transparency
- Camera friendly & good eye visibility
- More natural color perception

PREMIUM PROTECTION

- Resistance to scratches, smudges and daily wear

TAILOR-MADE VISION FOR CLEARER CAPTURES

FRAME PERFECT

- Designed for how your Ray-Ban Meta fits
- Wide angle vision, less distortion

GAZE SMART OPTICS

- Matching how your eyes naturally move
- Effortless everyday vision
- Stable clarity in motion

*Compared with regular single vision lenses. Eyezen® in-Life consumer studies - 3rd Independent parties - [Eyezen® Boost Crizal® Previncia® - 2015 - FR - n=76 / Eyezen® Boost Eye Protect System™ - 2016 - FR - n=51 / Eyezen® Start (Rx) - 2018 - FR - n=49 / Eyezen® Start (Stock) - 2020 - FR - n=52]

**Blue-violet light is between 400 and 455nm as stated by ISO TR 20772:2018

***Transitions optical, Consumer Sentiment and Behaviour, U.S Q4 2024, Independent panellist, N=1,005 wearers (N=334 age 18-34). Totally/ somewhat agree

RECOMMENDED COMBINATIONS TO ELEVATE YOUR VISION EXPERIENCE

EACH PROFILE FEATURES A COMPLETE LENS ECOSYSTEM DESIGNED TO ENHANCE VISUAL PERFORMANCE. SELECT A PROFILE TO EXPLORE THE RECOMMENDED COMBINATION AND UNLOCK ITS FULL BENEFITS.

**ALL-DAY COMFORT
& FASTER READING**

**DYNAMIC VISION
& BETTER NAVIGATION**

**TRUE VIEW TRANSPARENCY
& SMOOTHER REAL WORLD**

**TAILOR-MADE VISION
& CLEARER CAPTURES**

SINGLE VISION WEARERS

THE STARTING POINT	Ray-Ban SV AMPLIFIED	→	Transitions® GEN S™	→	AR Optimized +	→	Frame Optimized
THE STYLE DRIVER	Eyezen® Start	→	Transitions® Color Touch™	→	Crizal® Natural Look™	→	FIT
THE POWER PLAYER	Eyezen® Boost	→	Transitions® GEN S™	→	Crizal® Natural Look™	→	FIT

PRESBYOPES

THE STARTING POINT	Ray-Ban SV AMPLIFIED	→	Transitions® GEN S™	→	AR Optimized +	→	Frame Optimized
THE STYLE DRIVER	Varilux® Shift™	→	Transitions® Color Touch™	→	Crizal® Natural Look™	→	FIT
THE POWER PLAYER	Varilux® XR series™	→	Transitions® GEN S™	→	Crizal® Natural Look™	→	NVB*

*Near-Vision Behaviour

RECOMMEND SUPERPOWER LENSES FOR SUPERPOWER VISION

ALL RAY-BAN META FRAMES ARE AVAILABLE WITH PREMIUM ESSILOR® AND TRANSITIONS® LENSES, SO YOU CAN COVER ALL VISION NEEDS IN ONE SINGLE LENS.

Transitions®

Best paired with Transitions®
Dynamic lenses to move freely in any light

FREEDOM OF MOVEMENT

Transitions® lenses adapt seamlessly to changing light conditions, allowing continuous visual performance anytime, anywhere—indoors or outdoors.

- 2x more usage when Ray-Ban Meta is paired with Transitions® lenses*.

SEE BEYOND

They enhance visual quality in changing light while providing UV and Blue Light protection.

STYLE BOOSTER

A wide color palette offers endless pairing possibilities.

NEW 2026 TRANSITIONS® COLOR TOUCH™

Always on touch of color, gradient & washed

Eyezen®

Eyezen® – Advanced Visual Fatigue Reduction

ALL-DAY DIGITAL COMFORT

Eyezen® lenses are designed to reduce eyestrain** caused by digital lifestyles, ensuring relaxed and protected*** eyes throughout the day.

IMPROVED CONTRAST

They enhance contrast, helping the eyes stay relaxed and focused all day long, including during near-vision activities.

BLUE-VIOLET LIGHT FILTERING

Eyezen® lenses filter blue-violet light, supporting visual comfort and protection** in today's digital lifestyle.

Varilux® XR series™

Varilux® XR series™ – Intelligent Adaptive Lenses

SMART VISION DESIGNED USING AI

Varilux® XR series™ lenses predict how the eyes move, delivering a more natural and intuitive visual experience.

INSTANT SHARPNESS IN MOTION

Varilux® XR series™ lenses deliver immediate clarity, even while moving, for a natural and effortless visual experience.

SEAMLESS NEAR-TO-FAR VISION

They provide seamless shifts across all distances, from near to far, ensuring all-day digital visual comfort.

TAILOR-MADE VISION

They are tailored to the wearer's unique near-vision behavior for optimized, all-day performance.

TRANSITIONS® COMPATIBLE

* 2x more usage when Ray-Ban Meta is paired with Transitions® lenses vs static lenses. Meta User frequency analysis H1 2024.

**Compared with regular single vision lenses. Eyezen® in-Life consumer studies - 3rd Independent parties - [Eyezen® Boost, Crizal® Previncia - 2015 - FR- n=76 / Eyezen® Boost EPS - 2016 - FR - n=51 / Eyezen® Start (Rx) - 2018 - FR - n=49 / Eyezen® Start (Stock) - 2020 - FR - n=52]

***Protection against UV and blue-violet light filtering. (Blue-violet light is between 400 and 455nm as stated by ISO TR 20772:2018). ***Essilor International – Varilux® XR series™ lens - in-life consumer study – Eurosyn – 2022 – France (n=73 progressive lens wearers)

Transitions®

RAY-BAN META GLASSES, BEST PAIRED WITH TRANSITIONS® DYNAMIC LENSES

Ray-Ban Meta glasses with Transitions® lenses come together in a seamless fusion of innovation, cutting-edge tech, and style, creating the ultimate eyewear to see beyond and make the most of each moment in any light.

Transitions® lenses adapt to light while enhancing your vision & style. They are ideal for those who want to enjoy seamlessly their Ray-Ban Meta glasses all-day long and get freedom of movement indoors and out.



Transitions®


FREEDOM OF MOVEMENT

Ray-Ban Meta with Transitions® lenses fit perfectly your dynamic life.

Listen, capture, call and use the assistance of Meta AI anytime and anywhere, all day long.

2X MORE USED

With Transitions® lenses, wearers enjoy their device 2 times more than with static lenses.⁽¹⁾

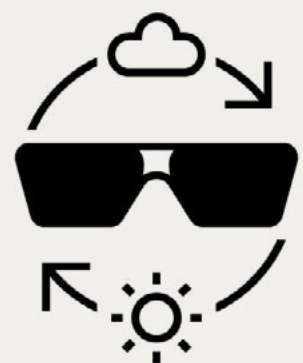

- ADAPT AMAZINGLY FAST TO LIGHT
- OPTIMAL REPONSIVENESS EVERY TIME, EVERYWHERE
- ALL DAY WEAR - INDOORS AND OUT


SEE BEYOND

The most advanced AI glasses paired with dynamic lenses, to ease your vision and your life.

Enjoy enhanced vision quality in changing light with ultimate light protection³.

2.5X FASTER

vision recovery time from bright to dim light compared to clear lens⁽⁶⁾

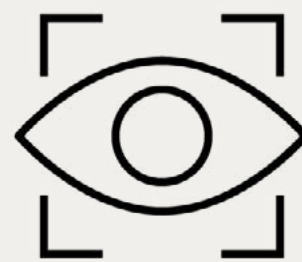

- EFFORTLESS VISION EXPERIENCE
- FASTER VISION RECOVERY FOR BETTER VISION^(5,6,7)
- BLOCK 100% UVA & UVB RAYS. FILTERS BLUE-VIOLET LIGHT INDOORS & OUTDOORS⁽²⁾

SELF EXPRESSION

Ray-Ban Meta glasses paired with Transitions® lenses offer iconic style with beautiful lens colors.

Complement any look with endless pairing possibilities from colors to effects.

83%

of 18 to 35 Y.O eyeglasses wearers want their eyewear to be both fun & functional⁽⁴⁾







- LARGE PALETTE OF COLORS & EFFECTS
- TRUE TO TONE AT ALL STAGES
- ENDLESS PAIRING POSSIBILITIES

(1) Meta User frequency analysis H1 2024. (2) For polycarbonate and CR39 lenses across colours. Blue-violet light is measured between 400nm and 455nm (ISO TR 20772:2018). (3) Block 100% UVA & UVB rays, darken outdoors & filter up to 32% of blue-violet light indoors & up to 85% outdoors. Blue-violet light is measured between 400nm and 455nm (ISO TR 20772:2018) across colors on polycarbonate & CR39 lenses. (3) 7. Harth JB, Hammond BR, Wysocki CJ, Renzi-Hammond LM. New photochromic spectacle lenses improve glare discomfort and photostress recovery. Results in Optics. 2025 Feb 1;18:100763. (4) Transitions optical, Consumer Sentiment and Behaviour, U.S Q4 2024, Independent panellist, N=1,005 wearers (N=334 age 18-34). Totally/ somewhat agree. (5) Better vision in challenging and varying light conditions, notably when moving from a bright to a darker environment (tested with Grey Transitions® GEN S™ lenses compared to Grey Transitions® Signature® GEN 8™ lenses and to static clear lenses) and in bright to very bright light situations (tested with Grey Transitions® GEN S™ lenses compared to static clear lenses). (6.)Raul Duarte-Toledo, Juan Mompeán, Alba M. Paniagua-Díaz, Guillermo Perez, Emmanuel Kobia-Acquah, Nacer Lakhchaf, Daniel Parker, Coralie Barrau, Pablo Artal; Contrast Sensitivity with Photochromic Lenses When Transitioning from Bright to Dark Environments. AAO 2024, P-11 Assessing Visual Function, Thursday, November (7) 2024. 7. Harth JB, Hammond BR, Wysocki CJ, Renzi-Hammond LM. New photochromic spectacle lenses improve glare discomfort and photostress recovery. Results in Optics. 2025 Feb 1;18:100763

HOW TO RECOMMEND TRANSITIONS® LENSES

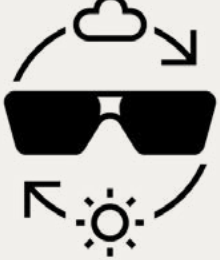Here's a simple and effective way to recommend Transitions® lenses highlighting the vision benefits, bringing them to life with real scenarios, and creating excitement through personalization.

<p>1</p>  <p>GATHER LIGHT-RELATED NEEDS</p> <p>Ask questions to gather your customer's light-related needs.</p> <ul style="list-style-type: none"> • How often do you change light environments on a busy day? • Is light ever uncomfortable, annoying or painful for you? • When do you feel most confident wearing your glasses? 	<p>2</p>  <p>ELEVATE EYEWARE TO DYNAMIC</p> <p>Highlight the key benefits:</p> <ul style="list-style-type: none"> • Effortless vision • Seamless adaptation • Freedom of movement in any light • Ultimate light protection⁽¹⁾ 	<p>3</p>  <p>NARRATE THE BENEFITS</p> <p>Use everyday situations (e.g. walking from sun to shade)</p> <p>Reinforce the main benefits:</p> <ul style="list-style-type: none"> • Seamless, vision, protection and style • Reassure about aesthetic, protection, or adaptability according to the light-related needs you gathered 	<p>4</p>  <p>SPARK EXCITEMENT WITH COLOR</p> <p>Suggest stylish frame-lens combos.</p> <p>For example: sapphire lenses for a soft look, ruby for boldness.</p> <p>Guide using Tone-on-Tone, Color- Blending, or Color Contrast rules.</p>
--	---	--	--

<p>ACCORDING TO PROFILS</p>	<p>Best paired with Transitions® lenses, Ray-Ban Meta glasses strongly resonate with a variety of profiles – from always-on-the-go intenders and tech enthusiasts to fashion lovers.</p>
<p>ALWAYS ON THE GO INTENDERS:</p>	<p><i>"I have something for you to fit your dynamic life and give you a freedom you have never experienced before with your glasses"</i></p>
<p>TECH PASSIONATE:</p>	<p><i>"This is cutting-edge tech designed to enhance your life with AI and ultra-responsive to light lenses"</i></p>
<p>FASHION FANS :</p>	<p><i>"A pop of color powered by cutting-edge technology can define your style and change everything. Let me help you find the perfect pairing to turn heads"</i></p>

(1) Block 100% UVA & UVB rays, darken outdoors & filter up to 32% of blue-violet light indoors & up to 85% outdoors. Blue-violet light is measured between 400nm and 455nm (ISO TR 20772:2018) across colors on polycarbonate & CR39 lenses. (3) 7. Harth JB, Hammond BR, Wysocki CJ, Renzi-Hammond LM. New photochromic spectacle lenses improve glare discomfort and photostress recovery. Results in Optics. 2025 Feb 1;18:100763.

HOW TO PAIR TRANSITIONS® LENSES

TRANSITIONS® LENS COLORS

Transitions®
Gen=S



Transitions®
color
touch

GRADIENT WASHED



Transitions®
XTRACTIVE®



Transitions®
XTRACTIVE®
POLARIZED™



3 PAIRING RULES

-tone on tone

A RADIANT LOOK THAT TRULY STANDS OUT AND CAPTIVATES.



THE EASY

The same frame and lens tints on the color wheel

Color Blending

A REFINED, EFFORTLESSLY STYLISH LOOK



THE SOFT

Similar frame and lens tints

Color Contrast

THE TOUCH FOR AN INTUIVE SENSE OF STYLE



THE BOLD






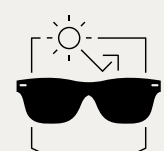
Different frame and lens tints

TRANSITIONS® PORTFOLIO



THE FUNDAMENTAL



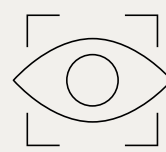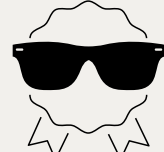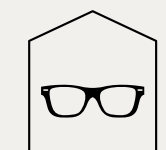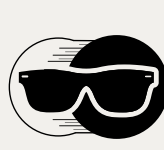



Transitions® GEN S™ is ultra-responsive to light, offers a spectacular color palette and provides effortless vision experience.

-  Effortless vision
-  Long lasting photochromic performance
-  Fully clear indoors
-  Amazingly fast
-  Darkens in seconds⁽¹⁾
-  Block 100% UVA & UVB rays. Filters blue-violet light indoors & outdoors⁽²⁾



THE TRENDSETTER





Designed to enjoy beautiful indoors subtle gradient or washed tint. Transitions® Color Touch™ delivers all-day eye comfort. When outdoors watch it darken and adapt to changing light for effortless vision. Look and feel amazing wherever you are.

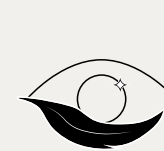-  Beautiful soft tints indoors
-  Personalize your lens
-  Sun lens dark outdoors
-  Ultra responsive to light
-  Subtle tint for eye comfort
-  Ultimate light protection⁽³⁾



THE MASTER OF PROTECTION


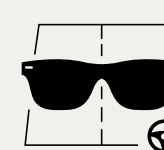
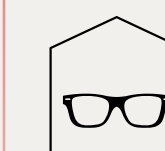
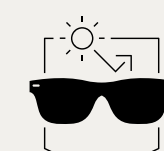
XTRActive® lens delivers the best XTRA darkness & the best XTRA light protection⁽⁴⁾ from intense light, both indoors and outdoors and even when you are behind the wheel.

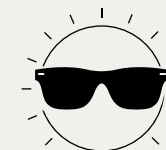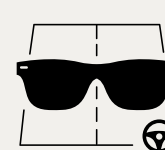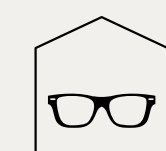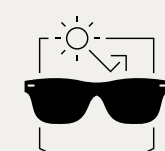-  The darkest in hot temperatures⁽⁵⁾
-  The darkest in the car⁽⁶⁾
-  Clear indoors with a hint of tint
-  Block 100% UVA & UVB rays. Filters blue-violet light indoors & outdoors⁽⁷⁾



THE SPECIALIST

Combining the benefits of light intelligent lenses and dynamic polarization, XTRActive® Polarized™ provides your eyes with XTRA protection in any light conditions while delivering sharper vision, vivid colors and a wide field of view outdoors⁽⁸⁾.

-  Less glare with up to 90% polarization efficiency⁽⁹⁾
-  Activates in the car⁽¹⁰⁾
-  Clear indoors with a hint of tint
-  Block 100% UVA & UVB rays. Filters blue-violet light indoors & outdoors⁽¹¹⁾

(1) For polycarbonate & CR39 lenses across colors achieving 18% transmission at 23°C. (2) For polycarbonate and CR39 lenses across colors. Blue-violet light is measured between 400nm and 455nm (ISO TR 20772:2018). Frames by RAY-BAN®, lenses Transitions® GEN S™ Ruby (3) Block 100% UVA & UVB rays, darken outdoors and filter 33-51% of blue violet light indoors and 80-93% outdoors across colors. Tests done on CR39 lenses. Blue-violet light is measured between 400nm and 455nm (ISO TR 20772:2018). *May not be suitable for low light conditions. (4) The darkest in hot temperatures & in the car, blocking 100% UVA & UVB and offering the best overall blue-violet light filtration across light situations* among clear to extra dark photochromic lenses.*Filtering blue-violet light (between 400 and 455nm ISO TR 20772:2018) among gray lenses with a premium anti-reflective coating.: filtering (i) up to 45% indoors at 23°C, (ii) up to 64% behind the windshield (iii) up to 86% outdoors at 23°C and (iv) up to 83% outdoors at 35°C. (5) Clear to extra dark photochromic category. Polycarbonate and 1.5 gray lenses tested at 35°C achieving <18%T using Transitions Optical's standard testing method. (6) Clear to extra dark photochromic category. Polycarbonate and 1.5 gray lenses tested at 23°C behind the windshield achieving between 18%T and 43%T. (7) Transitions® XTRActive® New Generation filters up to 45% of blue-violet light indoors and up to 86% of blue-violet light outdoors. Tests performed on gray lenses with a premium anti-reflective coating. Blue-violet light is between 400 and 455nm (ISO TR 20772:2018). V Frames by ic! berlin®, lenses Transitions® XTRActive® Brown. (8) EcoOptics Limited - Prof. Nicholas Roberts, Quantitative study evaluating the visual benefits of the polarization properties of lenses compared to similar non-polarized lenses, 2019/2020. (9) Based on tests across materials on gray lenses @ 23°C, using ISO 12312-1 standard. (10) Based on tests across materials on gray lenses, achieving transmission below 45% @ 23°C behind a standard windshield. The lens achieves a polarization efficiency of 30% behind the windshield, which is not classified as being "polarized". (11) Transitions® XTRActive® Polarized™ filters up to 45% of blue-violet light indoors and up to 90% of blue-violet light outdoors. Tests performed on gray lenses with a premium anti-reflective coating. Blue-violet light is between 400 and 455nm (ISO TR 20772:2018). Frames by TALLA®, lenses Transitions® XTRActive Polarized Grey.

Eyezen[®]


RELAX & PROTECT* THE EYES FROM SCREENS

FOR ALL SINGLE VISION WEARERS FROM 6 TO 50 YEARS OLD


A SPECIFIC LENS
DESIGN FOR CONNECTED LIFE



BLUE UV
FILTER SYSTEM

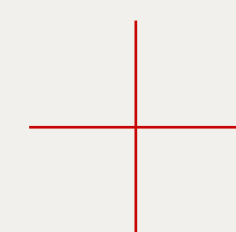


CRIZAL
COATING

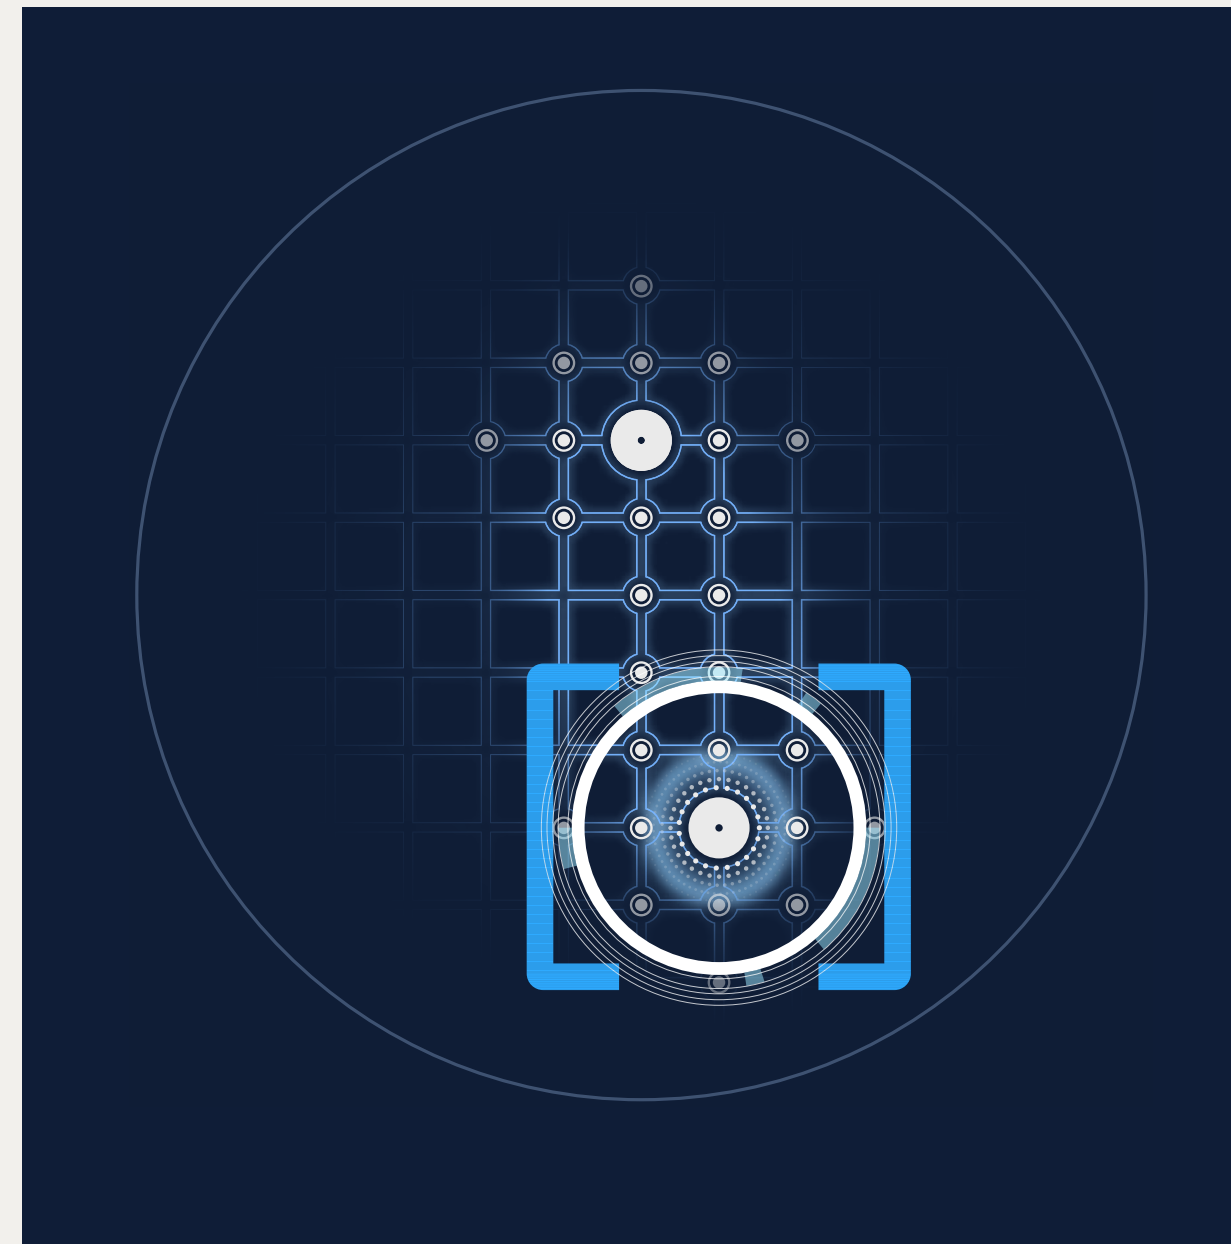

*Protection against UV and blue-violet light filtering. (Blue-violet light is between 400 and 455nm as stated by ISO TR 20772:2018)

RECOMMENDED WITH Eyezen®

Essilor Eyezen lenses are optimized single vision lenses that relax your eyes so you can keep up in connected world.

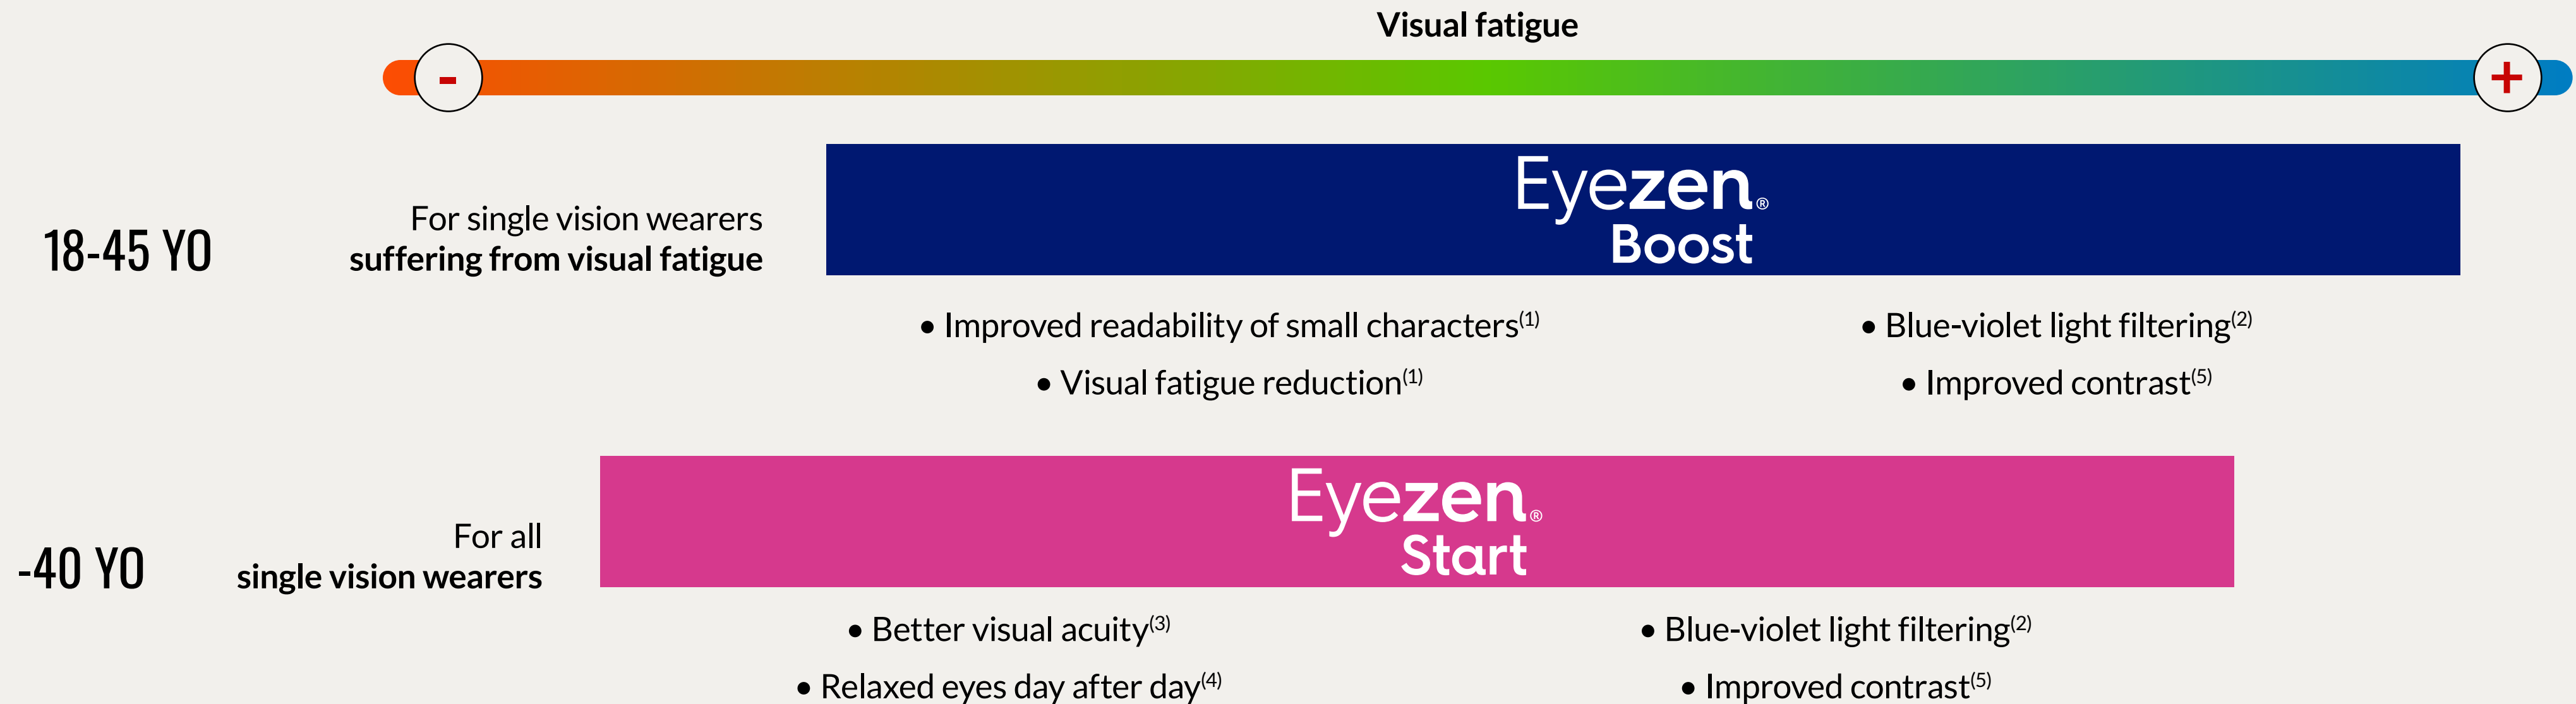

(1) Compared with regular single vision lenses. Eyezen® in-Life consumer studies - 3rd Independent parties - [Eyezen® Boost Crizal® Previncia® - 2015 - FR- n=76 / Eyezen® Boost Eye Protect System™ - 2016 - FR - n=51]

(2) Blue-violet light is between 400 and 455nm as stated by ISO TR 20772:2018.

(3) Internal Essilor R&D simulations 2022, increase of low aberration area compared to regular single vision lenses.

(4) Eyezen® in-Life consumer studies - 3rd Independent parties - [Eyezen® Start (Rx) - 2018 - FR - n=49 / Eyezen® Start (Stock) - 2020 - FR - n=52].

(5) Compared with regular single vision lenses. Eyezen® in-Life consumer studies - 3rd Independent parties - [Eyezen® Boost Crizal® Previncia® - 2015 - FR- n=76 / Eyezen® Boost Eye Protect System™ - 2016 - FR - n=51 / Eyezen® Start (Rx) - 2018 - FR - n=49 / Eyezen® Start (Stock) - 2020 - FR - n=52].

Ray-Ban | ∞ Meta

RECOMMENDED WITH Varilux®

#1 PROGRESSIVE LENS BRAND WORLDWIDE*

Ray-Ban | ∞ Meta

RECOMMENDED WITH

Varilux® XR series™

Designed using behavioral Artificial Intelligence


The 1st eye responsive progressive lens*

For instant sharpness, even in motion**

RAY-BAN META FRAMES ALSO AVAILABLE
WITH ALL THE VARILUX® RANGE

*Source: Euromonitor International, 2024 data; Retail value amongst spectacle lenses category, brands representing progressive lenses.
Varilux® XR series™ - in-life consumer study - Eurosyn - 2022 - France (n=73 progressive lens wearers)

**Eye-responsive defined as the consideration of two parameters in the design of the progressive lens: prescription and visual behavior.

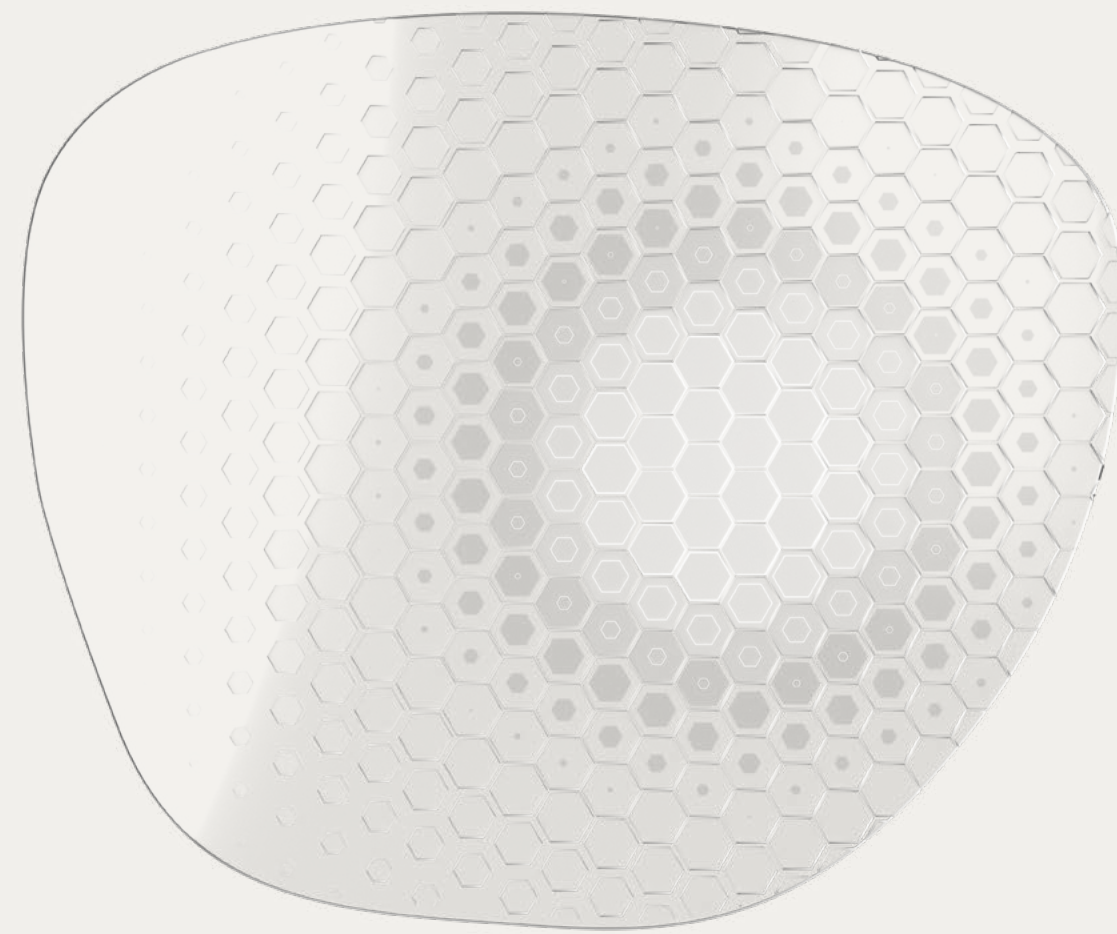

RECOMMENDED WITH

Crizal® Natural Look™

CRIZAL'S BEST ANTI-REFLECTIVE COATING EVER*

Powered by patented Advanced Aesthetic Technology™, a new breakthrough innovation redefining reflection color control.

The results?

- Minimal reflection, maximum natural look
- More natural color perception
- Always with Crizal's premium shield of protection: resistance to scratches, smudges, and daily wear



*Based on IEC consumer preference testing (n=61; six lighting scenarios) and an EUROSYN expert-panel evaluation (n=15) comparing selected Crizal® products and external competitor anti-reflective coatings on 1.6-index clear lenses. Crizal® Natural™ demonstrated higher consumer preference for eye visibility, aesthetic appeal, and high discretion across test conditions. Expert panel evaluation highlighted Crizal® Natural™'s performance for eye visibility, mirror effect, colour consistency, and skin-tone shift. 1-EssilorLuxottica (2025). Internal data on file. 2-Based on IEC consumer preference testing (n=61; six lighting scenarios) and an EUROSYN expert-panel evaluation (n=15) comparing selected Crizal® products and external competitor anti-reflective coatings on 1.6-index clear lenses. Crizal® Natural Look™ demonstrated higher consumer preference for eye visibility, aesthetic appeal, and high discretion across test conditions. Expert panel evaluation highlighted Crizal® Natural Look™'s performance for eye visibility, mirror effect, colour consistency, and skin-tone shift. 3-Based on EUROSYN expert-panel evaluation (n=15) conducted on 1.6-index clear lenses compared with Crizal® Sapphire HR™. Assessment parameters: colour neutrality, including perceived colour modification and yellowness. 4-Based on external durability testing performed by NSL Analytical, including scratch resistance (Bayer test) and topcoat durability, on 1.6-index clear lenses comparing all products within the Crizal® range. Crizal® Natural Look™ showed performance equivalent to Crizal® Sapphire HR™ and Crizal® Rock™. Results are specific to the test methods and conditions.

**PRESCRIPTION
OFFER**

GENERAL OFFER

ALL RAY-BAN META FRAMES ARE AVAILABLE WITH PREMIUM ESSILOR® LENSES, SO YOU CAN COVER ALL VISION NEEDS IN ONE SINGLE LENS.

Correct vision.

With the high-quality corrective lens design that meets consumers' needs.

Protect the eyes.

Go beyond and help protect the health of the eyes against blue-violet** and UV light.

Enhance clarity of lenses.

Shield the eyes from reflections, smudges and scratches for picture-perfect clarity.



Experience seamless vision with Varilux® progressive lenses. Instantly sharp focus from near to far vision*.



The new generation of single vision lenses, designed to relax and protect the eyes of wearers with connected lifestyles.



Crizal® acts as an invisible shield of protection for wearer's eyes and lenses, providing a feeling of ease and uninterrupted comfort.

Check the availability in your country.

*Varilux® XR series™ & Varilux® Comfort Max in-Life Consumer Studies – EUROSYN – FRANCE – 2022/2020

**Blue-violet light is between 400 and 455nm as stated by ISO TR 20772:2018


PRESCRIPTION LENSES // SIGNED BY RAY-BAN

Ray-Ban prescription lenses are designed for a perfect fit with the frame, preserving the original color and brand signature.

Each lens is completed with an iconic engraved logo, a distinctive mark of quality and authenticity. The goal is to deliver a premium experience for those who seek not only visual correction but also the authenticity and iconic style that Ray-Ban represent.

In 2025, we simplified and evolved our communication from Ray-Ban Authentic to Prescription lenses signed by Ray-Ban. This new communication approach focuses on simplicity, emphasizing key customer benefits and presenting a clean, essential layout that reflects Ray-Ban's style.

Supporting materials for more information:
RBA Catalogue, RBA+RBE Catalogue, Lensbook and Leonardo General Information.

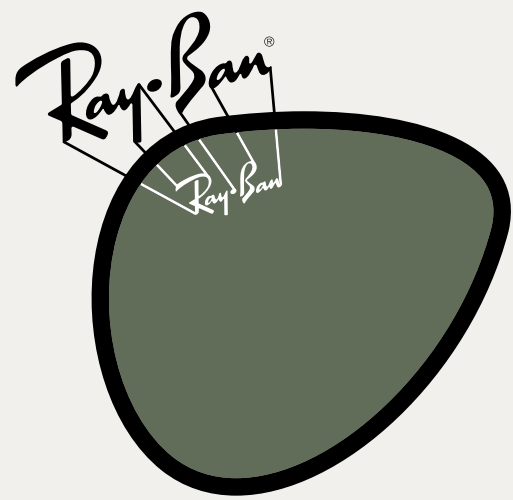

*Check the availability in your country.

CLEAR AND TRANSITIONS® SINGLE VISION // OUR NEW OFFER

RECOMMEND THE LENS DESIGN

RAY-BAN SV TUNED



- Designed for a clear vision correction solution

RAY-BAN SV EQUALIZED



- Designed for a high vision resolution with optimized Sharpness

RECOMMENDED

RAY-BAN SV AMPLIFIED



- Designed to help relieve wearer's eye fatigue from their connected lifestyles

DISCOVER ALL THE FEATURES INCLUDED IN THE COMPLETE PAIR




LEGENDARY STYLE FEATURES




Authentic Ray-Ban Signature

Stamped logo on the right lens and RB initials on the left lens

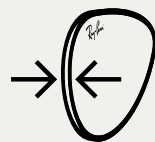


Thinning Technology

Lens thickness reduction specially for hyperopes

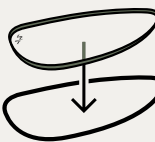


Advanced Edging & Mounting

Specific edging and mounting process to refine aesthetics

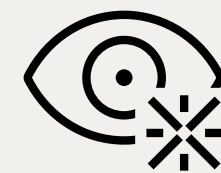

GREAT SIGHT FEATURES

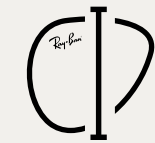

Frame Optimized⁽¹⁾

Lens design adjusted to Ray-Ban frame measures



Ray-Ban AR Optimized Plus⁽²⁾

High level of lens transparency and scratch resistance



Ray-Ban Blue Light Ease⁽³⁾

Embedded UV and blue-violet light filter⁽⁴⁾

(1) Frame Optimized available for Ray-Ban SV Equalized only.

(2) Ray-Ban AR Classic also available in Tuned & Equalized designs.

(3) Ray-Ban Blue Light Ease is an optional feature for SV Tuned & Equalized, always included for SV Amplified. UV protection is always included.

(4) Blue-violet light is between 400 and 455 nm as stated by ISO TR 20772:2018.

CLEAR AND TRANSITIONS® PROGRESSIVE // OUR NEW OFFER

RECOMMEND THE LENS DESIGN

RAY-BAN PAL BASE



- An easy-to-adapt progressive lens designed for clear vision

RAY-BAN PAL TUNED



- A well-balanced progressive lens designed with an optimized mid-distance vision

RAY-BAN PAL EQUALIZED



- An advanced progressive lens designed with wide fields of vision for an accurate vision at all distances

RECOMMENDED

RAY-BAN PAL AMPLIFIED



- A high-end progressive lens designed for sharp and wider intermediate vision, and freedom in body posture

DISCOVER ALL THE FEATURES INCLUDED IN THE COMPLETE PAIR




LEGENDARY STYLE FEATURES




Authentic Ray-Ban Signature

Stamped logo on the right lens and RB initials on the left lens

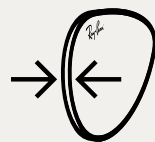


Thinning Technology

Lens thickness reduction specially for hyperopes

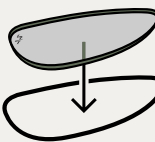


Advanced Edging & Mounting

Specific edging and mounting process to refine aesthetics

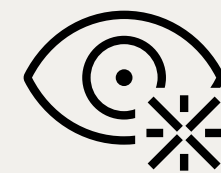

GREAT SIGHT FEATURES

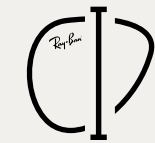

Frame Optimized⁽¹⁾

Lens design adjusted to Ray-Ban frame measures



Ray-Ban AR Optimized Plus⁽²⁾

High level of lens transparency and scratch resistance



Ray-Ban Blue Light Ease⁽³⁾

Embedded UV and blue-violet light filter⁽⁴⁾

(1) Frame Optimized available for Ray-Ban SV Equalized only.

(2) Ray-Ban AR Classic also available in Tuned & Equalized designs.

(3) Ray-Ban Blue Light Ease is an optional feature for SV Tuned & Equalized, always included for SV Amplified. UV protection is always included.

(4) Blue-violet light is between 400 and 455 nm as stated by ISO TR 20772:2018.

A young man with curly brown hair is wearing black Ray-Ban smart glasses and a light blue denim jacket. He is looking directly at the camera with a neutral expression. The background is a dark, textured grey.

LENS MOUNTING & DISPENSING TIPS

LENS MOUNTING

AI GLASSES, NOW WITH A FULL RANGE OF LENSES FOR SUPERIOR AESTHETICS AND VISUAL CLARITY.

AVAILABLE AS COMPLETE PAIR OR EDGED LENS.

- Frame bezel has been optimized and does not require specific beveling of lenses to ensure proper fit. **Follow regular lens edging process for optical frames.**
- Use solvents on lenses only prior to mounting.
- Ensure lenses are completely dry before proceeding.
- Do not apply heat when removing demo lenses or inserting prescription lenses. **Proceed with cold mounting only.**
- Nose pads are designed to be securely positioned during lens mounting. If adjustment is needed, follow the provided instructions to reattach them and ensure they are properly secured before dispensing.



MOUNTING INSTRUCTIONS

MOUNT THE LENSES FROM THE FRONT USING THE STANDARD PLASTIC FRAME MOUNTING TECHNIQUE.

STEP 1

Begin by placing corners ① and ② firmly into the bezel.

STEP 2

Insert corner ③ by applying pressure towards corners ① and ② (see arrow), then press down into corner ③ until it snaps into place.

STEP 3

Snap in corner ④ to complete the mounting.



STEP 1



STEP 2



STEP 3



*The Ray-Ban Meta warranty is not impacted by the addition of prescription lenses when the proper mounting process is followed, in line with EssilorLuxottica's guidelines.

PROVIDING THE BEST RAY-BAN META EXPERIENCE IN STORE

RECOMMEND RAY-BAN META GLASSES, MADE FOR PRESCRIPTIONS

As an optical professional, your expertise is key to delivering the full Ray-Ban Meta experience. Beyond recommending the right prescription solution, making the offer visible in-store helps generate traffic, spark curiosity, and build confidence in the category.

FOLLOW THESE DISPENSING TIPS:

1 SELECT THE RIGHT FRAME AND SIZE

Once the customer has chosen a frame, ensure the correct size based on facial dimensions, bridge fit, and ear position. Clearly explain the benefits of prescription lenses, such as blue-violet light filter, thinning technology and premium anti-reflective coatings, to reinforce both visual comfort and aesthetics.

2 FIT AND PERSONALIZE THE FRAME

During dispensing, the optician is responsible for achieving optimal comfort and stability:

- The **temple tips** are designed for manual adjustment only and adapt to the wearer's head shape.
- The **over-extension hinges** feature 10 degrees of extra rotation, supporting natural movement and ensuring all-day comfort and an optimal fit.
- The **interchangeable nose pads** allow fine-tuning of the bridge fit. Select and install the correct nose pad size to ensure even weight distribution and secure positioning

3 VERIFY COMFORT AND STABILITY

Check that the frame sits securely on the nose and ears, does not slip during movement, and does not create pressure behind the ears. Proper adjustment at this stage minimizes the need for future interventions.

4 FINALIZE PRESCRIPTION POSITIONING

Measure the vertical fit point for each eye to ensure accurate positioning of the digital lens design and optimal visual performance.



Ray-Ban Meta (Gen 2) Optics Styles are engineered to support a highly personalized fit during dispensing. Once properly fitted, no further nose pad replacement or temple tip adjustment should be required under normal use, ensuring long-term comfort and customer satisfaction.

**PACKAGING
& CHARGING CASE**

PACKAGING

Ray-Ban Meta Blayzer Optics (Gen 2) and Ray-Ban Meta Scriber Optics (Gen 2) come with the following accessories and user manuals:

- Charging Case
- Cleaning Cloth
- Nose Pads Envelope
- Quick Start Guide
- Safety & Warranty Guide

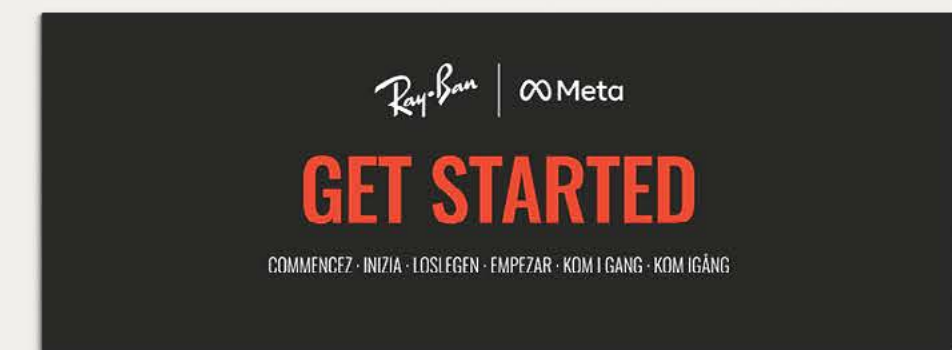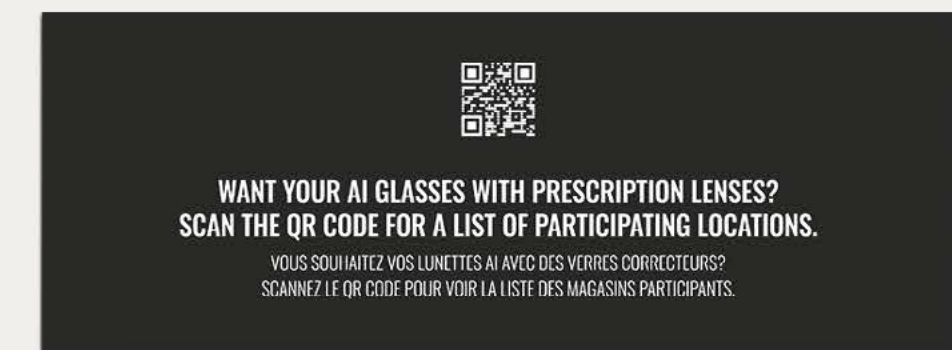

PACKAGING

PREMIUM BOX DESIGN

The box design clearly displays the style name and generation.




NOSE PADS ENVELOPE

A dedicated envelope includes two sets of interchangeable nose pads, with one pair already mounted on the glasses.



NEW CHARGING CASE

The new charging case features a more premium finish.

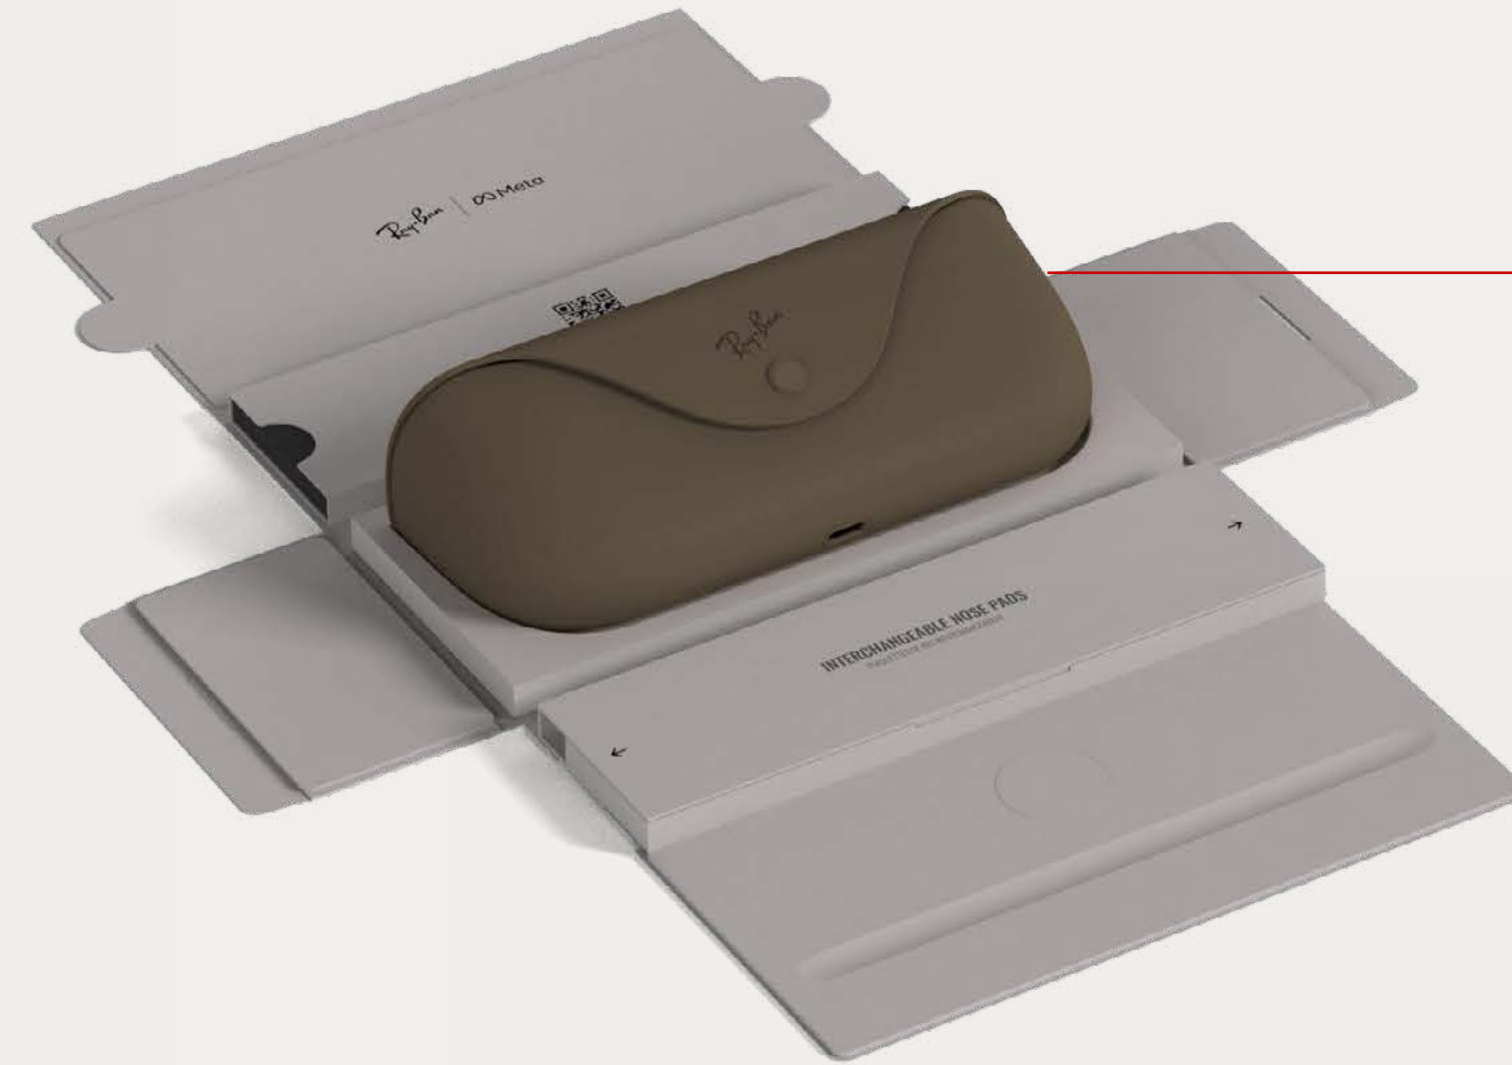

CHARGING CASE

BATTERY LIFE THAT KEEPS UP WITH YOUR SCHEDULE

With over 8 hours of power on a single charge, your AI glasses are designed to take you from your morning commute through evening plans.

CHARGING CASE

Designed as a single, streamlined solution, one charging case supports all Ray-Ban Meta SKUs.

The new case is **fully backward compatible**, allowing users to charge any Ray-Ban Meta (Gen 1) and Ray-Ban Meta (Gen 2).

However, Ray-Ban Meta Blayzer Optics (Gen 2) and Ray-Ban Meta Scriber Optics (Gen 2) are not compatible with the previous charging case.



CHARGING CASE

TECH SPECS

Built-in rechargeable lithium-ion battery USB-C charging cable supported.*

A fully charged case delivers up to 48 additional hours of battery life, equivalent to up to 6 full frame charges on the go.

Fast charging brings the glasses to 50% in just 20 minutes.

A complete recharge to 100% takes less than one hour.



CHECKING THE CHARGE LEVEL OF GLASSES AND CASE

There are two ways to check the charge level of your glasses and case:

1. USE THE CASE LED

Your charging case has an LED indicator on the front that shows the charge status of the case or glasses.**

Glasses undocked



Case Battery




Timeout after 8s

Glasses Docked



Glasses Battery

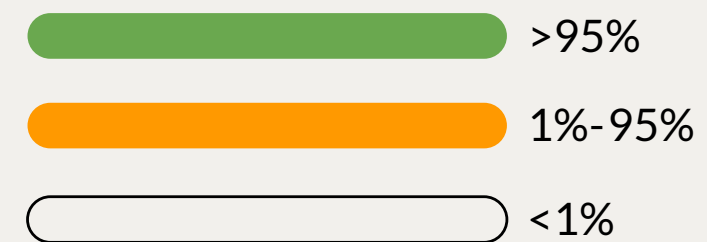

Timeout after 8s

2. USE THE META AI APP

When your glasses are connected to the app, you can see the charge status on the main screen at the top left. You can also check the charging status in Settings.

To see the case charge level within the app, dock your glasses in the charging case.

*Charging cable not included in packaging.

** If the case is plugged in, the LED remains on. If the case is not plugged in, the LED shows the charge level for 8 seconds.



META AI APP

META AI APP


YOUR ALL-IN-ONE COMPANION

Set up and manage your glasses, import and share your photos and videos, learn about new features, and manage settings so your glasses are always up to date.

With Meta AI built directly into the app, you can start a conversation with the Meta AI assistant on your glasses and seamlessly pick up where you left off in the app.

Use AI to easily edit your imported photos, and learn how others are getting the most out of Meta AI through the Explore feed.

*The Meta AI app is required to support your glasses experience.

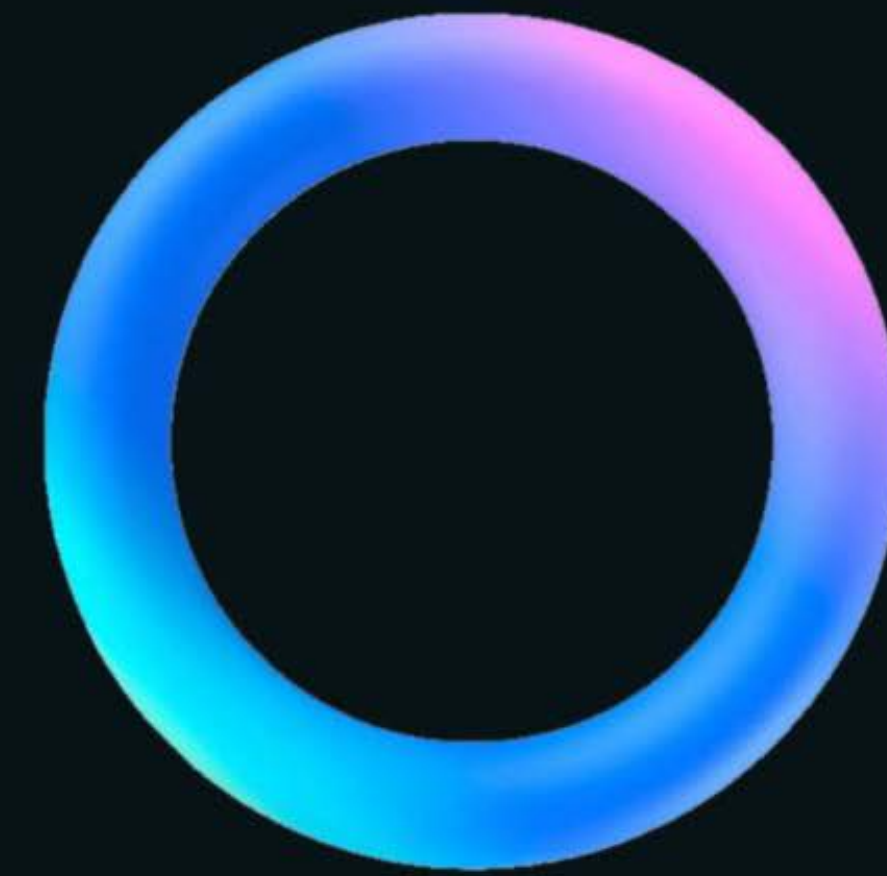

Meta AI

PRIVACY

YOU'RE IN CONTROL OF YOUR INFORMATION AND CONTENT

1. PRIVACY SETTINGS

Easy to access settings let you view and manage the information you share with Meta. Meta collects data needed to help make your glasses and app reliable, secure, and operating normally, and you can choose to share additional data to improve the experience.

2. VOICE COMMANDS


Settings allow you to easily enable voice commands and turn them off any time, as well as manage other privacy preferences. Choose whether to store voice recordings and activity logs or delete past voice interactions, putting you in control of your privacy.

3. CAPTURE LED


The Capture LED lets other people know when you're capturing content or going Live and during video calls. If the Capture LED is covered, you'll be notified to clear it.

4. POWER BUTTON

Easily turn off your Ray-Ban Meta glasses by sliding the power switch. No content can be recorded when they're off.

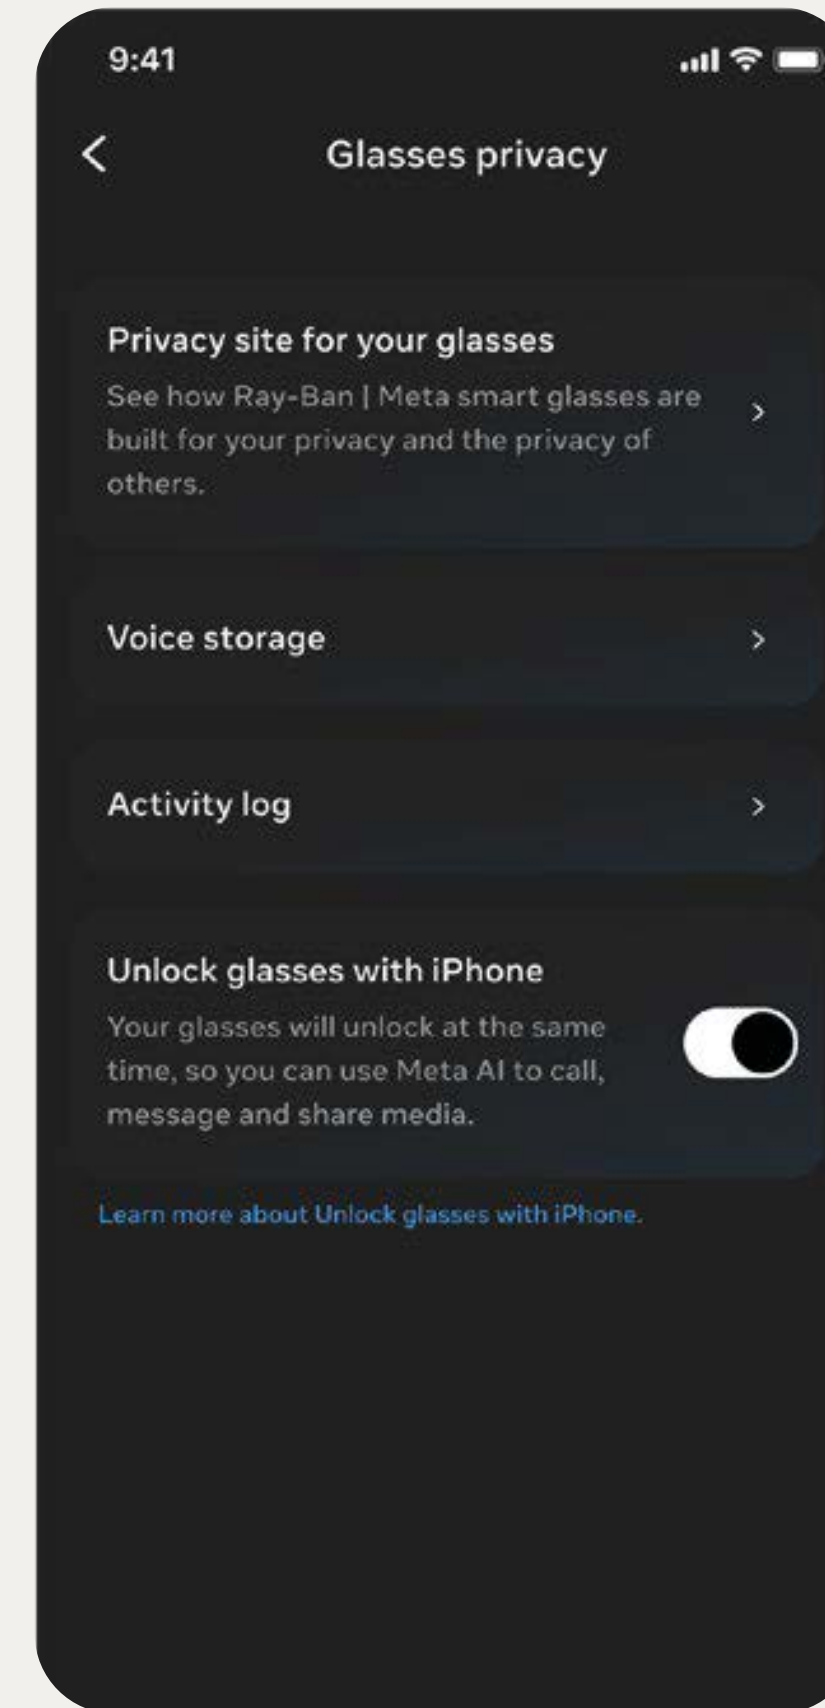

1

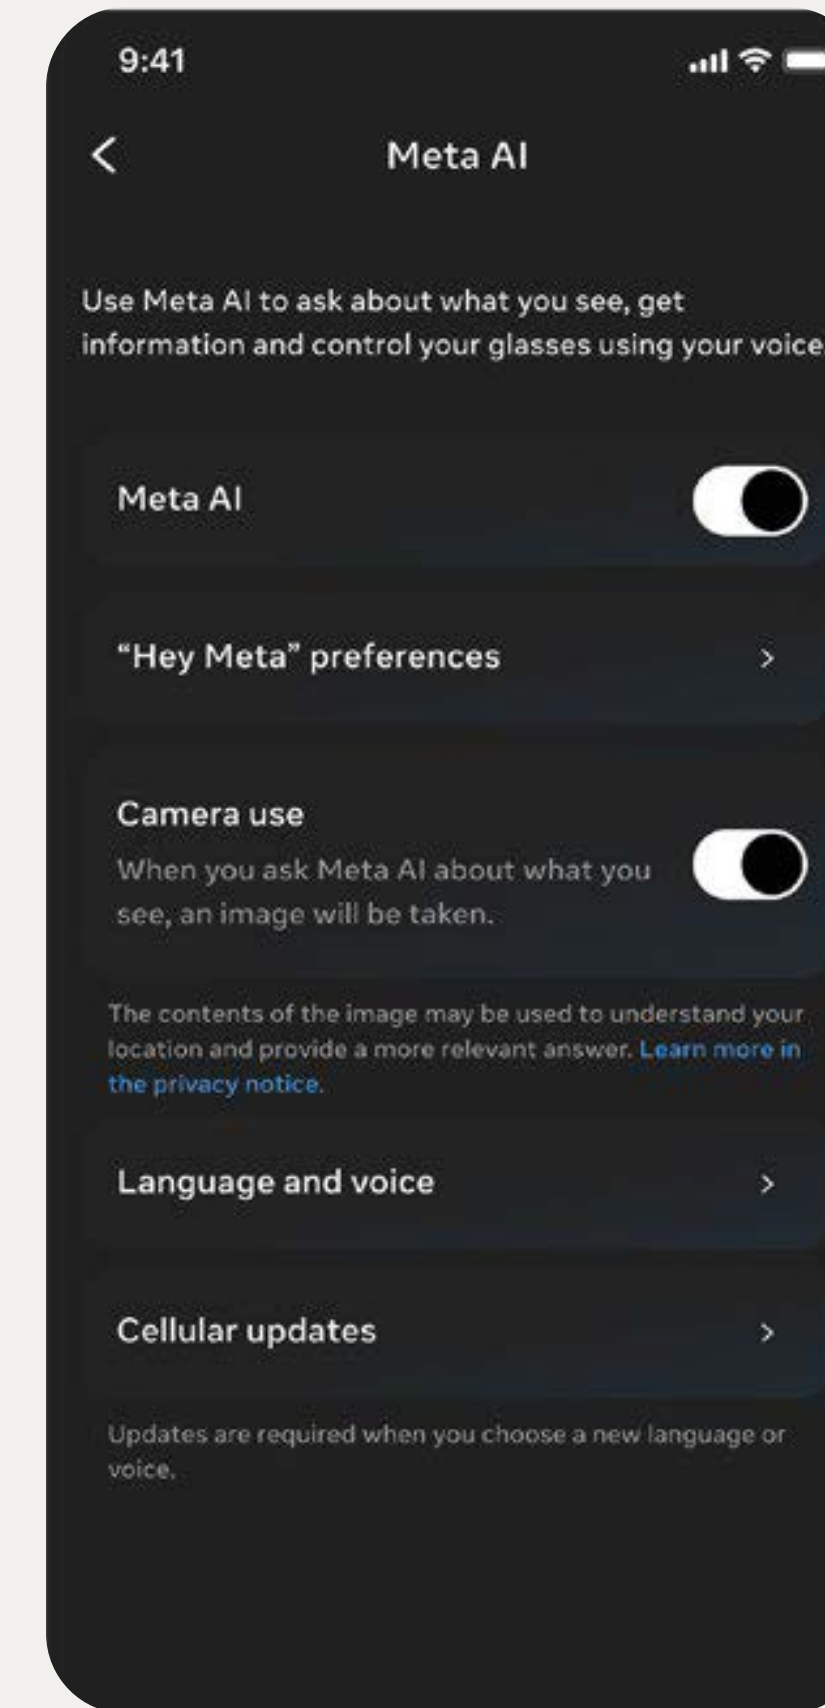

2

META ACCOUNT





CREATE ONE META ACCOUNT FOR ALL YOUR DEVICES

Meta accounts are a new way to log in to Meta devices that provide more control over the information you share and how you interact with Meta apps and devices.

You can choose whether to add your Facebook or Instagram accounts to your Meta account in Accounts Center.



Whether or not you add your Facebook or Instagram accounts, you'll still have access to all the Ray-Ban Meta features.

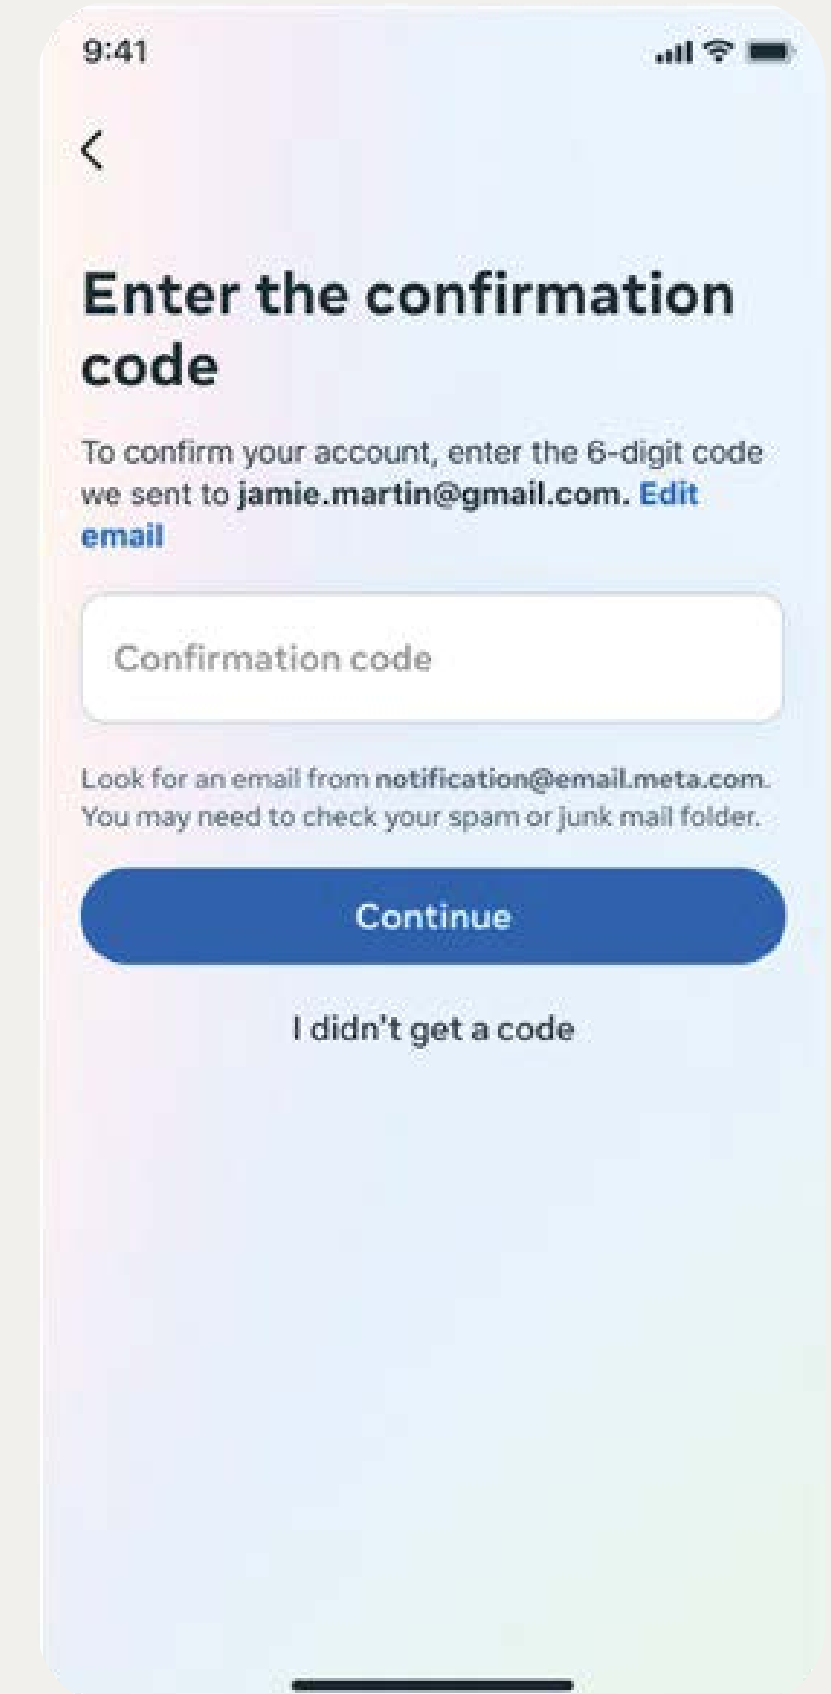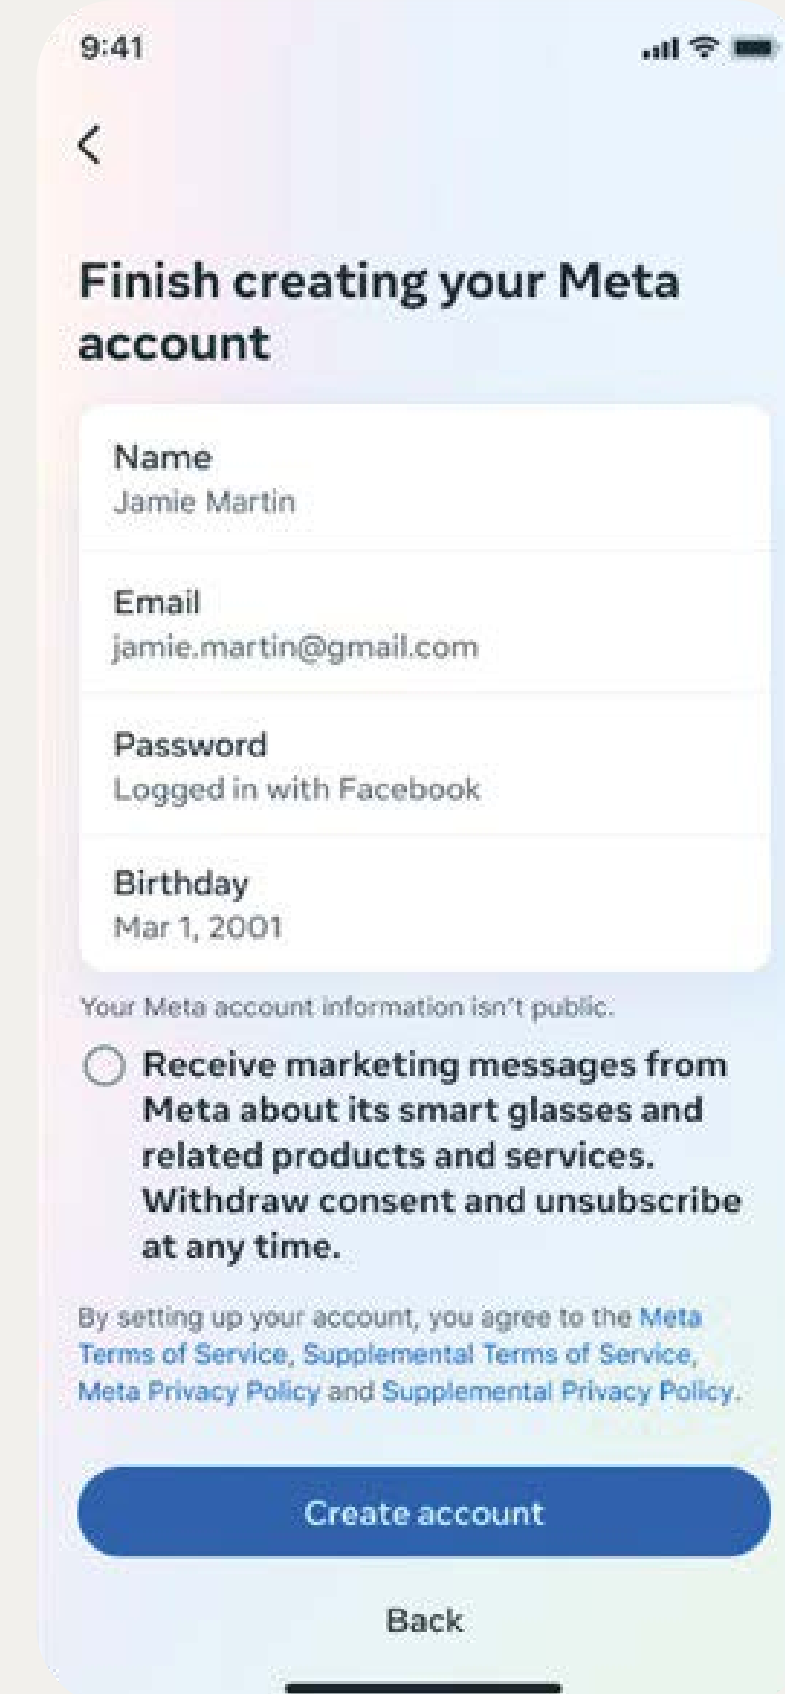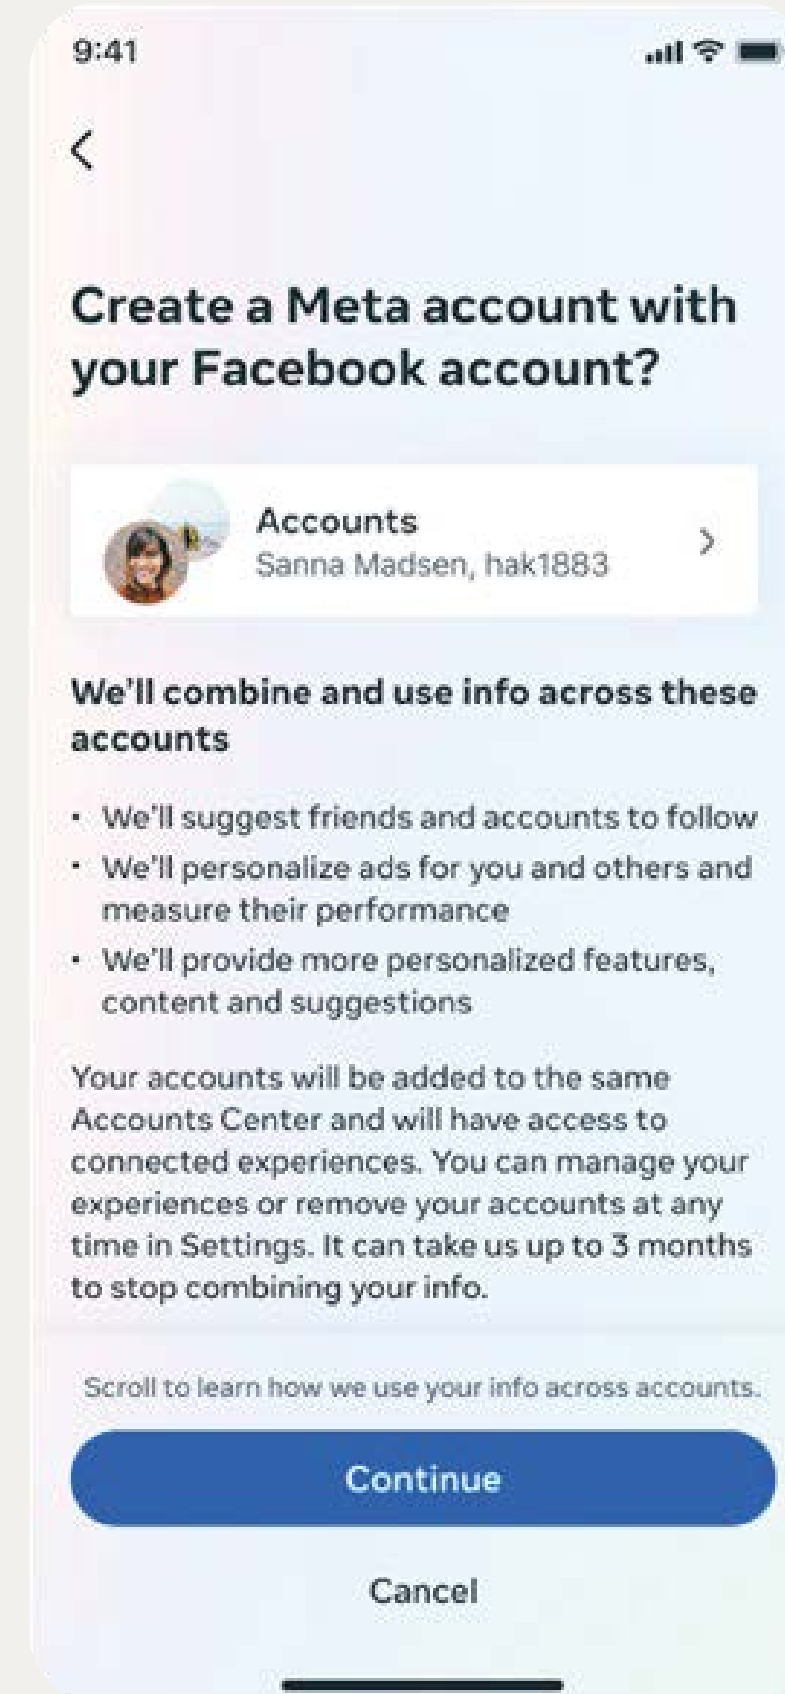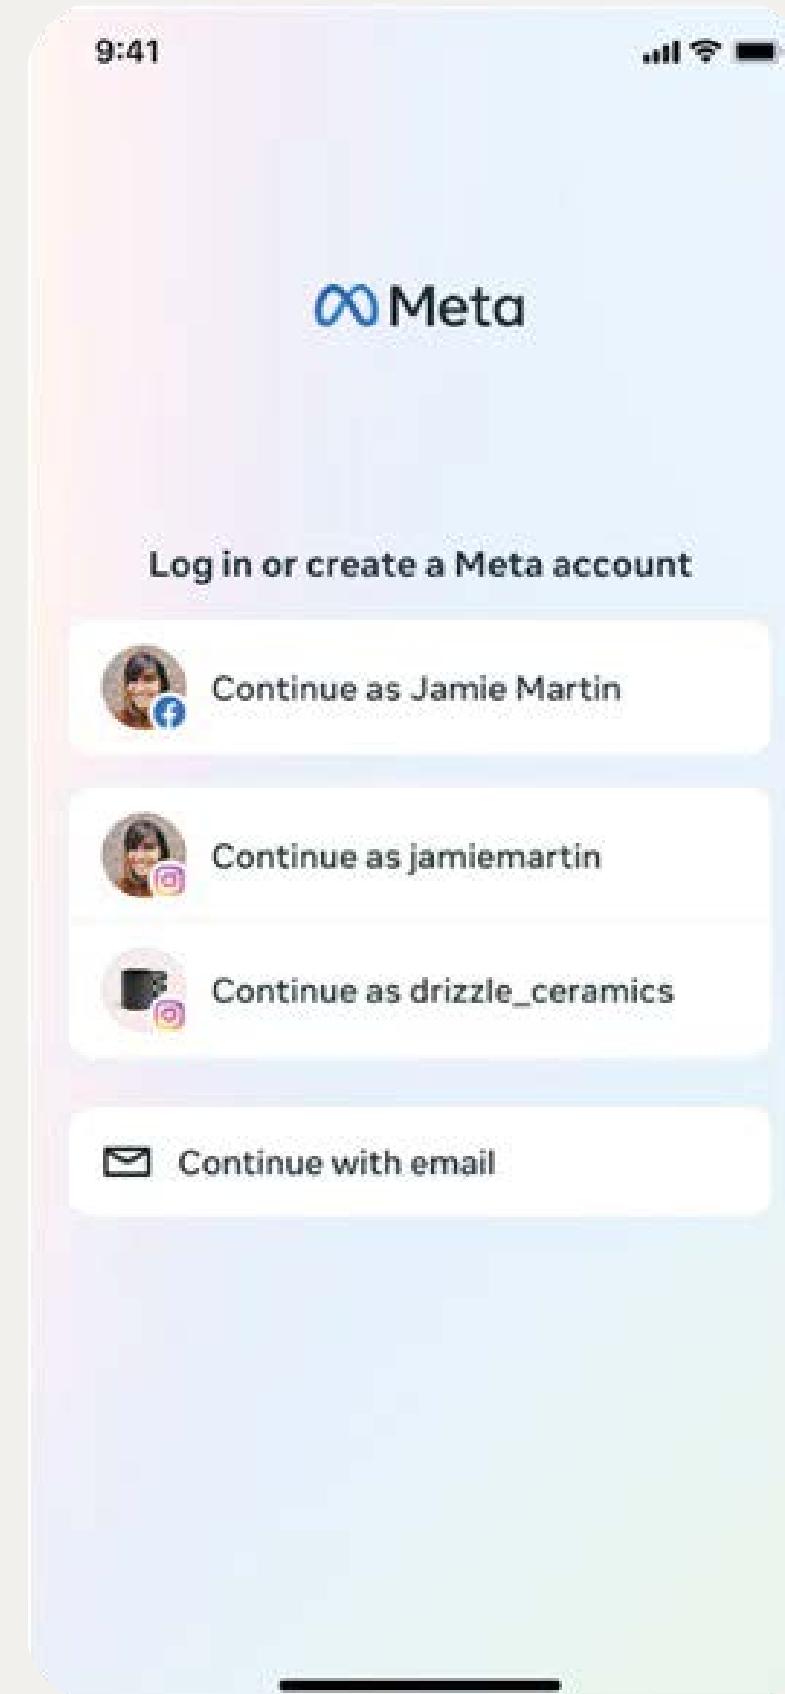You can choose to use an existing Meta account or create a new one using email, Facebook or Instagram login.






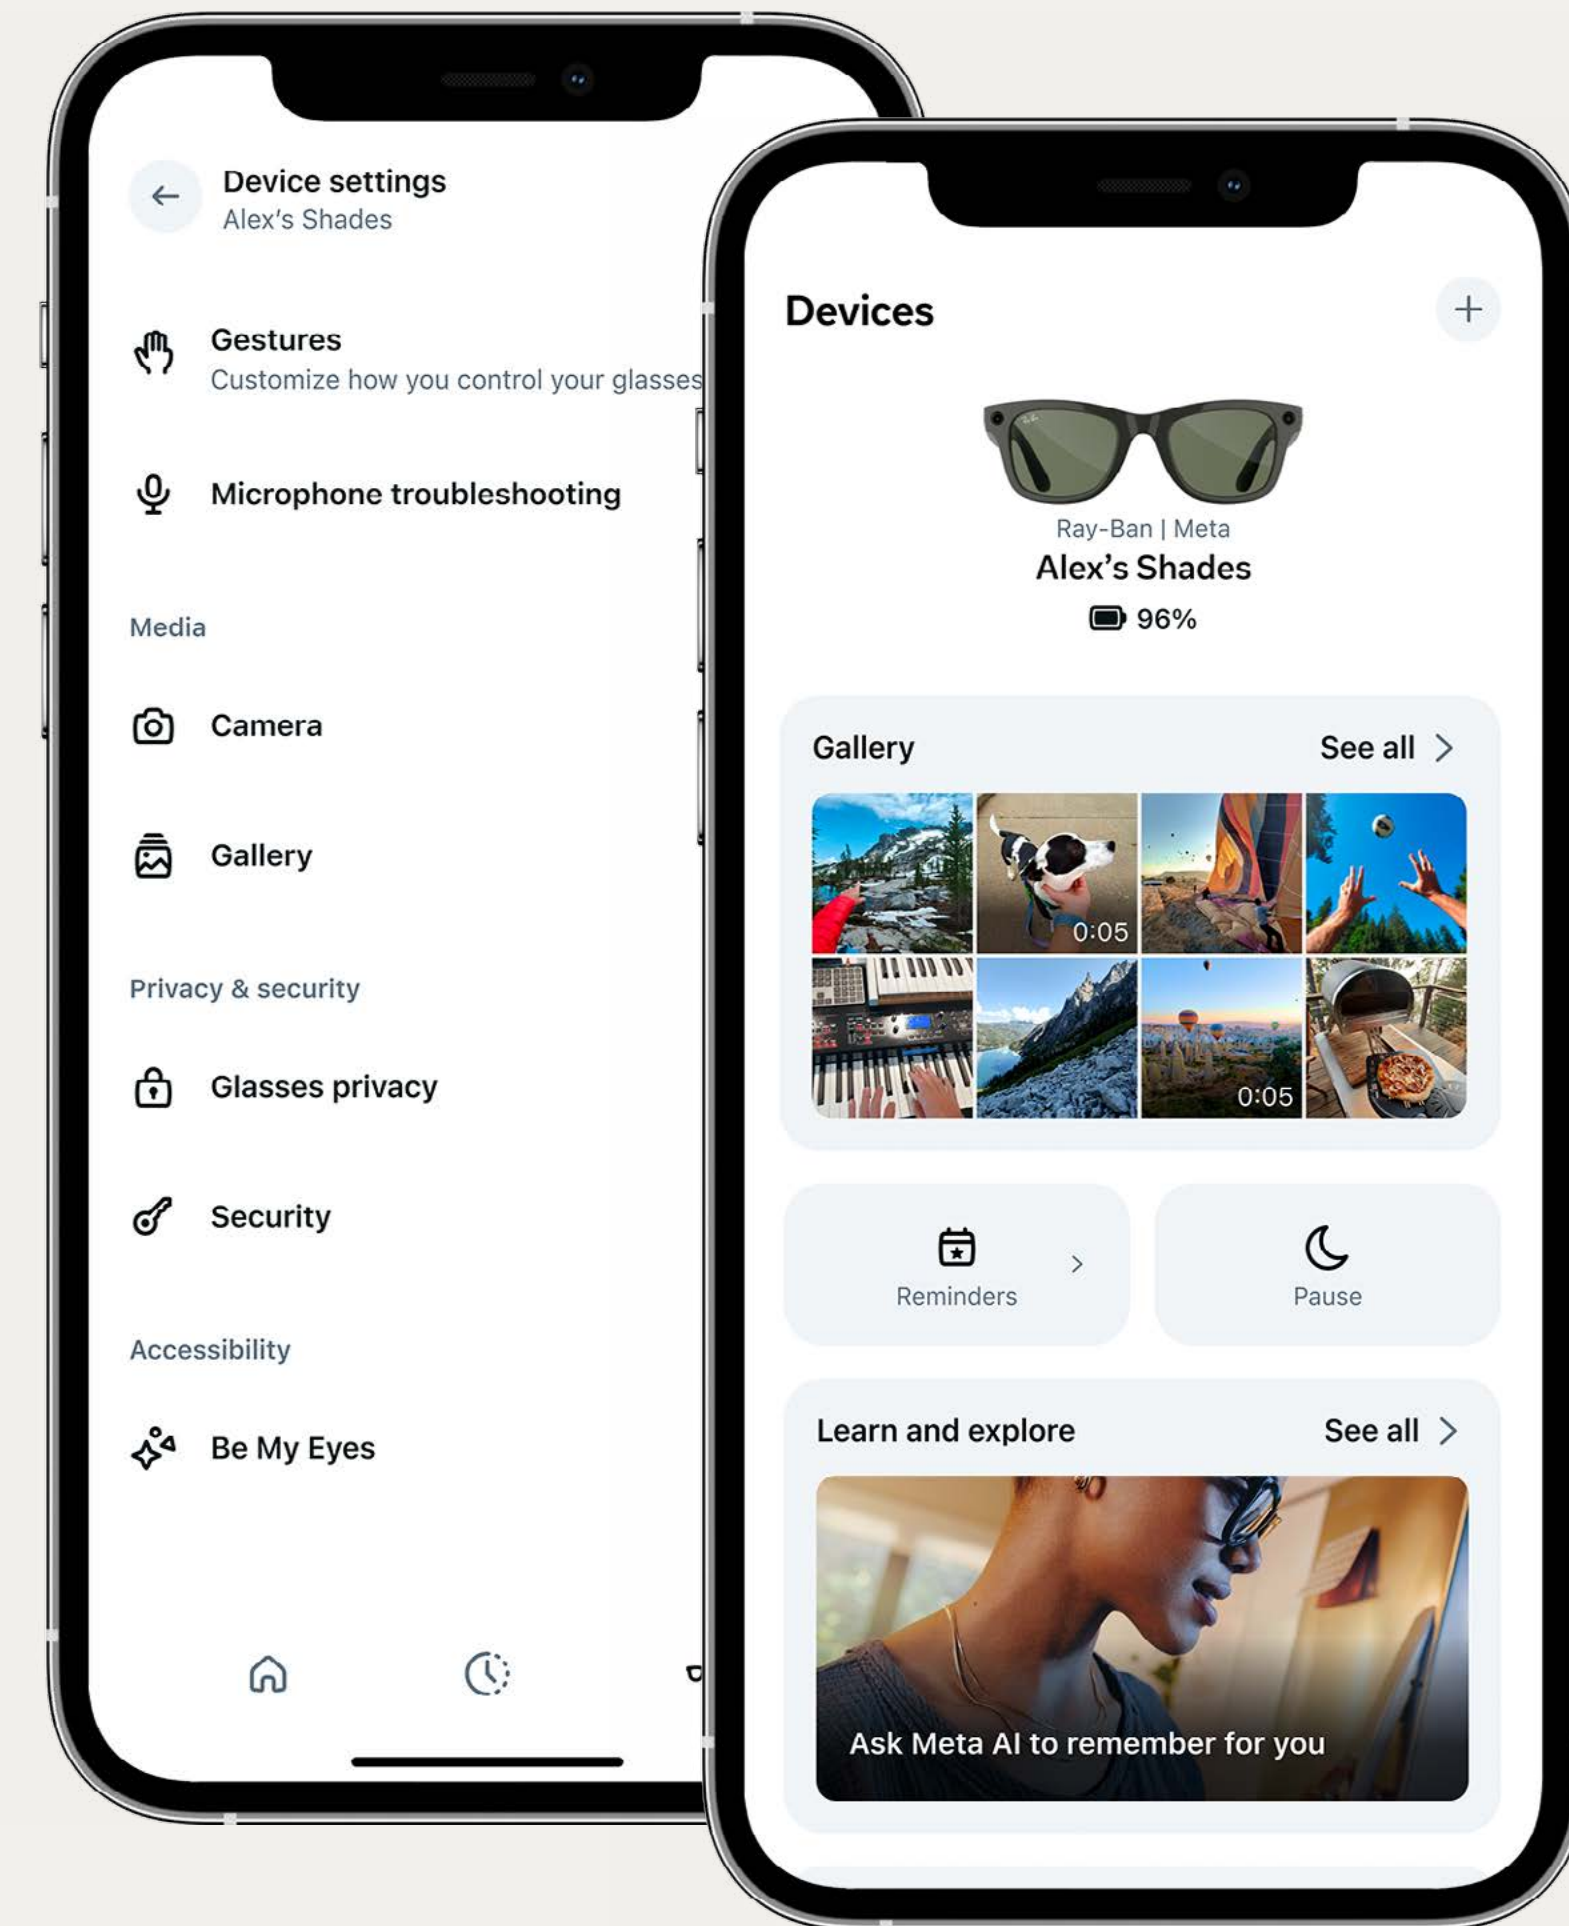
HOW TO PAIR AND UNPAIR YOUR GLASSES

HOW TO PAIR YOUR GLASSES WITH THE META AI APP*

1. Remove your glasses from the case.
2. Turn your glasses on by sliding the power switch on the left frame towards the front of the glasses.
3. Put your glasses back inside the case, making sure to gently push down on the top of the glasses so that the bottom of the nose bridge on your glasses makes contact with the charging port inside the case.
4. When the case LED starts flashing blue, your device is ready to pair with the Meta AI mobile app. If your device doesn't automatically go into pairing mode, you can manually turn pairing mode on by pressing and holding the button on the back of the case for at least 5 seconds.
5. From the Meta AI mobile app, tap  in the bottom right.
6. Tap  in the top right and follow the on-screen instructions.


HOW TO UNPAIR YOUR GLASSES FROM THE META AI APP**

1. From the Meta AI mobile app, tap  in the bottom right.
2. Tap . If you have multiple devices paired with the Meta AI mobile app, swipe left or right to select the device you want to unpair before tapping .
3. Tap General.
4. Tap Unpair glasses.
5. Tap Unpair.



*AI glasses can only pair with one Meta account at a time. You'll need to factory reset your glasses before someone else can pair them to their account.

**Unpairing your glasses will not change or erase any settings. You may also need to "forget" your AI glasses from your phone's Bluetooth connected devices menu to complete unpairing.



**FREQUENTLY
ASKED QUESTIONS (FAQ)**

FREQUENTLY ASKED QUESTIONS (FAQ)

HOW CAN REPLACEMENT NOSE PADS BE ORDERED?

Replacement nose pads are managed as spare parts, in addition to being available as accessories. They are assigned a specific spare part code and can be ordered through the standard ordering process, following the usual spare order flow used for components and replacements.

CAN CONSUMERS ADJUST THE TEMPLE TIPS OR CHANGE THE NOSE PADS INDEPENDENTLY, OR IS PROFESSIONAL ASSISTANCE RECOMMENDED?

During the dispensing phase, the optician is responsible for fitting the glasses: adjusting the temple tips for comfort and stability, and selecting the correct interchangeable nose pads. While nose pads can be changed, and temple tips can be adjusted, once the fitting is completed these actions should not be needed under normal use.

If fit changes over time, adjustments are recommended to be handled by the optical professional.

ARE NOSE PADS UNIVERSAL ACROSS ALL RAY-BAN META (GEN 2) OPTICS STYLES OR MODEL-SPECIFIC?

Nose pads are model-specific. Ray-Ban Meta Blayzer Optics (Gen 2), regular and large, uses its own dedicated set of nose pads available in three sizes. Ray-Ban Meta Scriber Optics (Gen 2) features a different set of nose pads.

ARE NOSE PADS AVAILABLE AS ACCESSORIES?

Yes. Nose pads are available as accessories. Nose pads included in the original packaging match the frame color. As accessories, nose pads are offered in Matte Black, Shiny Black, and Transparent Clear for the Blayzer Optics style (compatible with both regular and large sizes), and in Shiny Black and Transparent Clear for the Scriber Optics style.

FREQUENTLY ASKED QUESTIONS (FAQ)

HOW LONG DO FULLY CHARGED GLASSES LAST?

Fully charged glasses provide over 8 hours of continuous use. The charging case adds up to 48 additional hours, for a total of up to 56 hours of battery life. Actual battery performance may vary based on usage patterns and active features.

CAN I REPLACE THE BATTERY IN MY GLASSES OR CHARGING CASE?

No, it's not possible to replace the embedded battery inside the glasses or charging case.

HOW LONG DOES IT TAKE TO CHARGE MY GLASSES?

Fast charging brings the glasses to 50% in just 20 minutes. A complete recharge to 100% takes approximately 75 minutes.

HOW DO I OPERATE THE CAMERA IN LOW LIGHT OR MOTION CONDITIONS?

The 12MP camera automatically adjusts to your environment for consistently high quality photo and video captures.

CAN I ORDER A REPLACEMENT CHARGING CASE?

Yes, replacement cases are available for purchase through the Ray-Ban assistance portal. You'll need to create an account if you don't already have one. Once logged as a registered user, select Buy Replacement Parts and enter your Ray-Ban Meta model code to ensure the correct charging case is purchased. Replacements are currently limited to one case per order.

FREQUENTLY ASKED QUESTIONS (FAQ)

ARE THE NEW RAY-BAN META (GEN 2) OPTICS STYLES ELIGIBLE FOR INSURANCE COVERAGE?

The new Ray-Ban Meta (Gen 2) Optics Styles are eligible by default for most insurance plans, supporting adoption among prescription customers.

HOW CAN I MAKE SURE MY GLASSES ARE ALWAYS UP TO DATE?

You can check whether your glasses are up to date or update them at any time by going to: Settings > Your glasses > Glasses update.

WILL SOFTWARE UPDATES BE RETROACTIVE AND SUPPORTED ON RAY-BAN META (GEN 1) AND RAY-BAN META (GEN 2) MODELS?

Yes. Software updates are retroactive and supported on both Ray-Ban Meta (Gen 1) and Ray-Ban Meta (Gen 2) models, ensuring consistent AI capabilities and feature enhancements across generations. The Meta AI mobile app notifies users when software updates are available for the glasses or the app and downloads them automatically. Updates can also be checked or disabled at any time from the device settings.

ARE THE NEW RAY-BAN META BLAYZER OPTICS (GEN 2) AND RAY-BAN META SCRIBER OPTICS (GEN 2) WATERPROOF?

Ray-Ban Meta glasses are IPX4 water resistant, offering protection against light rain and splashes during everyday use. If the glasses get wet, simply remove them as soon as possible, wipe them completely dry and you're good to go.

The product is not designed for submersion or prolonged exposure to water or other liquids. In the event of water contact, ensure the glasses and charging areas are completely dry and free from any residue or debris.

ADDITIONAL SUPPORT & TROUBLESHOOTING

For further information, additional questions, or troubleshooting support, please visit www.ray-ban.com or www.meta.com and refer to the dedicated support sections.



THANKS